



Epson Online Meetings Operation Guide

Introduction to the Epson Online Meetings App 3

Features of the Epson Online Meetings App.....3

Using the Epson Online Meetings App 4

Connecting a Webcam with a Microphone to the Projector.....4

Launching Epson Online Meetings.....4

Joining Meetings.....5

Meeting Screen6

Solving Problems 7

I Cannot Join Meetings.....7

I Cannot Be Seen.....7

I Cannot Be Heard7

I Cannot Hear Other Participants.....7

I Accidentally Left a Meeting.....7

Notices 8

About this App8

General Notice.....8

 
Trademarks and Software Copyrights9

Copyright Attribution9

Introduction to the Epson Online Meetings App

3

Features of the Epson Online Meetings App

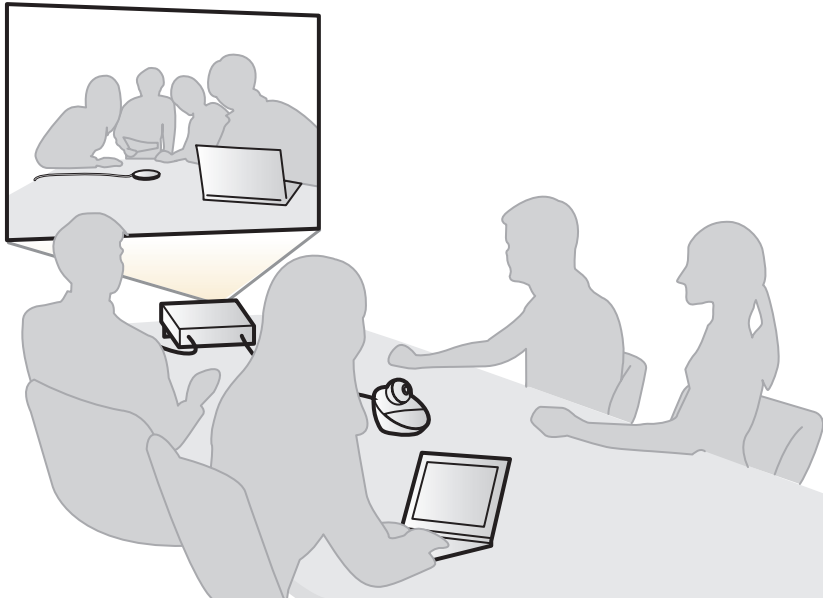


The Epson Online Meetings app allows you to join meetings on the Zoom video conferencing service from an Google TV™ projector.

- You can use this app by connecting the projector to your Wi-Fi network.
- To transmit video and audio, you need a commercially available webcam with a microphone.
- As this app does not allow you to start a meeting as a host (meeting organizer), you cannot hold meetings or issue invitations.

Using the Epson Online Meetings App

4

Connecting a Webcam with a Microphone to the Projector

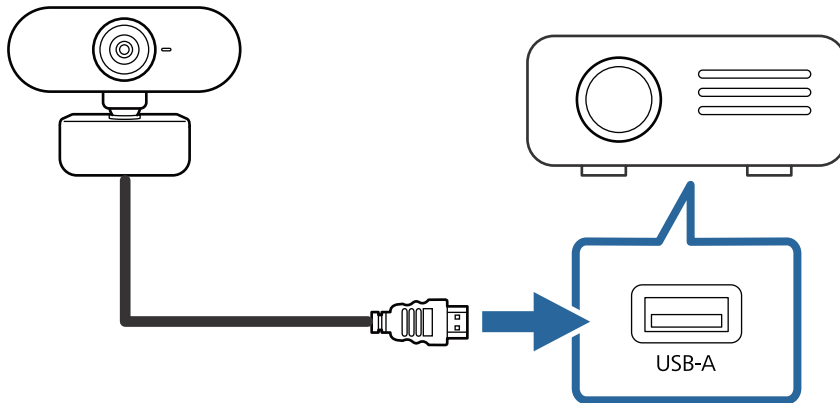

Connect a commercially available webcam with a microphone to the USB-A port of your Google TV projector. (You do not need to connect a webcam with a microphone to launch this app.)




Connect the camera before you launch the app.

If you connect the camera after launching the app, the camera feed may not display correctly.

Launching Epson Online Meetings



- 1 Start the projector.
- 2 Select the Epson Online Meetings icon from the home screen to launch the app.

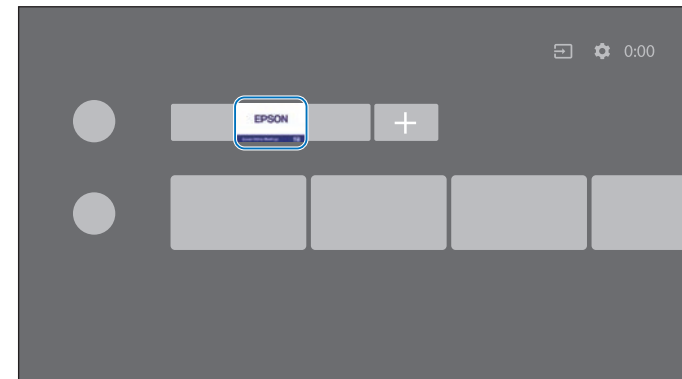

When you first launch the app, the license agreement screen and guide are displayed. After checking the points in the agreement, press [Agree]. Next, check the guide, and then press [OK].

Using the Epson Online Meetings App


5


Joining Meetings

This section explains how to join meetings.


Check your meeting ID and passcode with your host in advance.

- 1 Select the [Meeting ID] entry field, and then enter the meeting ID.

Press  to view a history of your previous meetings.

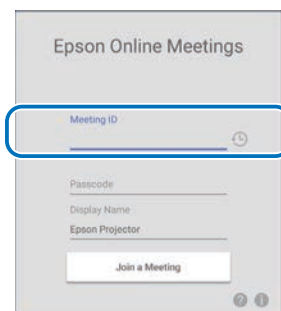


- 2 Select the [Passcode] entry field, and then enter the passcode.

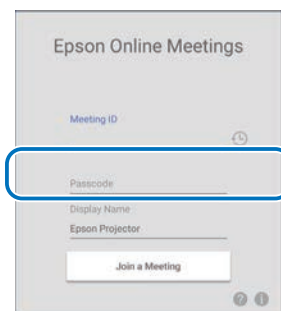

- 3 As necessary, you can change your display name from [Display Name].

- 4 Press [Join a Meeting].

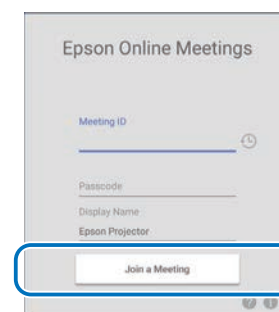
 


- 5 Wait for the host (meeting organizer) to allow you to join the meeting.



When “Allow Epson Online Meetings to record audio?” is displayed, press [Allow] to give the app permission to recognize your webcam with a microphone.




If you want to exit before the meeting starts, press the  Esc button on the remote control once. The message “Press again to exit” is displayed. Press the  Esc button again while this message is displayed to close the app.

Using the Epson Online Meetings App

6

Meeting Screen

This section explains the screens that are displayed during the meeting.
Press the down button on the remote control to display meeting information and the in-meeting controls. To close the menu, press the up button on the remote control or wait for a few seconds.

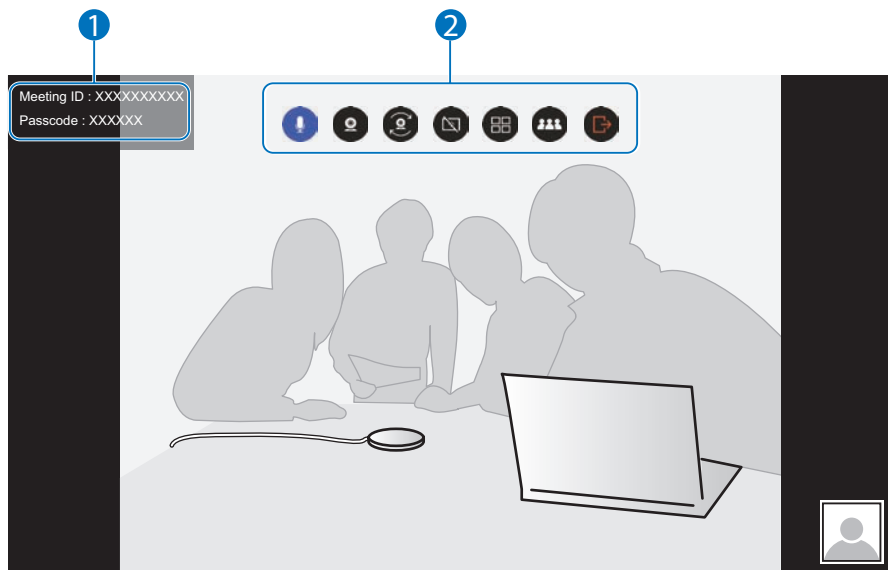

① Meeting Information

② In-Meeting Controls



When the host leaves the meeting, one of the other guest participants becomes the host.

In-Meeting Controls


	Explanation
	Turns the microphone on/off (mute).
	Turns the camera on/off.
	Switches between the cameras in use. The camera switch button is only displayed when the cameras are on and multiple cameras, including built-in ones, are connected. Pressing the camera switch button cycles through the available video feeds. <Example> When two cameras (Camera A and Camera B) are connected: Switching order: Camera A → Camera B → Camera A → ...
	Switches between whether or not to allow participants to share their screen. *This is only displayed when you are the host.
	Switches the display layout of the meeting screen. When you join a meeting, the initial view is speaker view.
	Displays a list of participants. You can chat with meeting participants.
	Leaves the meeting. When you turn off the projector or return to the home screen, you automatically leave the meeting.

This section explains problems that may occur and how to solve them.
See the projector's "User's Guide" for details on how to operate the projector.

I Cannot Join Meetings

- Make sure you have entered your meeting ID and passcode correctly.
- If you do not know your meeting ID or passcode, check with the meeting host.
- If the meeting is not in progress, ask the host to start the meeting.
- If you are waiting for permission to join, ask the host for permission.
- Make sure you have a stable Wi-Fi network connection. If there are any obstacles between the projector and the Wi-Fi router, move them out of the way.


I Cannot Be Seen

- Make sure a webcam with a microphone is connected to the projector's USB-A port.
- Make sure the camera function is not disabled.  "In-Meeting Controls" P. 6
- Make sure you close the app once and restart it.




We cannot guarantee that all webcams with microphones will work.


I Cannot Be Heard

- Make sure a webcam with a microphone is connected to the projector's USB-A port.
- Make sure the microphone function is not disabled.
 "In-Meeting Controls" P. 6

I Cannot Hear Other Participants

- Use the remote control to adjust the projector's volume.
- Make sure the microphone function for the other participants is not disabled. You can check if the microphone function is enabled on the list of participants screen.
 "In-Meeting Controls" P. 6

I Accidentally Left a Meeting

- If the meeting is still going, you can re-enter your meeting information to return to the meeting.  "Joining Meetings" P. 5

About this App

- Inquiries

If you need support for this app, visit <https://epson.com/>.

- Installing this App

Since this app does not require user authentication, you do not need to install it from the Zoom App Marketplace.

You can only use this app with projectors that have Google TV. See the Epson website (<https://epson.com/>) for applicable products.

1. Search for “Epson Online Meetings” in Google Play and install this app.
2. Select the Epson Online Meetings icon on the projector’s home screen to launch the app.
3. See “Using the Epson Online Meetings App” in this guide for details on using this app.

👉 “Using the Epson Online Meetings App” P. 4

- Uninstalling this App

Since this app does not require user authentication, you do not need to uninstall it from the Zoom App Marketplace.

- Link to Google Play

<https://play.google.com/store/apps/details?id=com.epson.projector.onlinemeetings>

General Notice

1. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.
2. Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.
3. Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.
4. The contents of this guide may be changed or updated without further notice. Illustrations in this guide and the actual projector may differ.

Trademarks and Software Copyrights

The Zoom name and logo are trademarks or registered trademarks of Zoom Video Communications, Inc. in the United States and other countries, including Japan.

Google Play and Google TV are trademarks of Google LLC.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Software Copyright: This product uses free software as well as software to which this company holds the rights.

Copyright Attribution

This information is subject to change without notice.

© 2020 Seiko Epson Corporation

2025.08 Ver1.71 EN