EPSON®
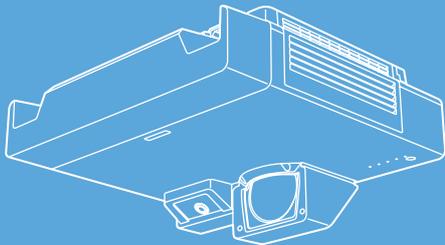
Multimedia Projector

EB-1485Fi
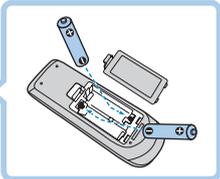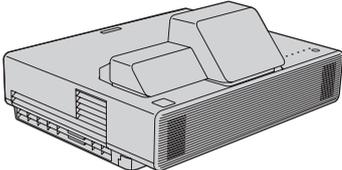# EB-1480Fi
EB-805F
EB-800F

3LCD

|	
EN	Quick Start Guide
DE	Kurzanleitung
FR	Guide de démarrage rapide
IT	Guida di avvio rapido
ES	Guía de inicio rápido
PT	Guia de Referência Rápida
NL	Introductiehandleiding
DA	Introduktion
FI	Pika-aloitusopas
NO	Hurtigveiledning
SV	Snabbstartsguide
CS	Úvodní příručka
HU	Bevezetés
PL	Przewodnik szybkiego startu
SK	Stručná príručka
BG	Ръководство за бърз старт
RO	Ghid de pornire rapidă
ET	Lühijuhend

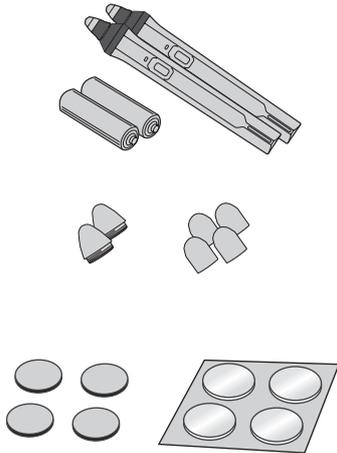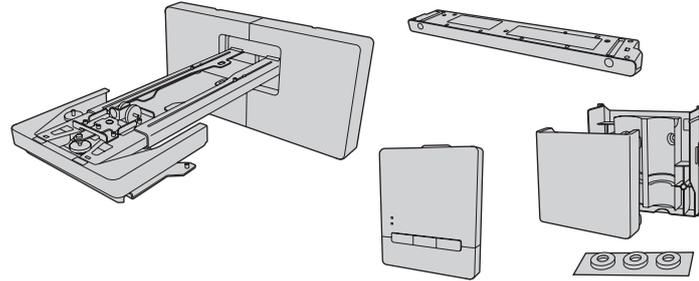|	
LV	Ātrās darba uzsākšanas pamācība
LT	Trumpas pradžios vadovas
EL	Οδηγός γρήγορης εκκίνησης
TR	Hızlı Başlangıç Kılavuzu
SL	Priročnik za hitri zagon
HR	Kratke upute
MK	Прирачник брз почеток
SR	Uputstvo za brz početak
CA	Guia d'inici ràpid
RU	Руководство по бЫстрой установке
UK	Коротка інструкція "Початок роботи"
KK	Қысқа іске қосу нұсқаулығы
KO	빠른 시작 가이드
ID	Panduan Ringkas
AR	دليل البداية السريعة
FA	راهنماي سريع براي شروع بكار
ZHS	设定手册
ZHT	設定說明書

Product Box Contents
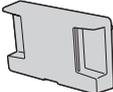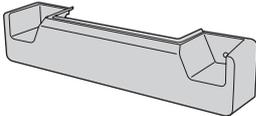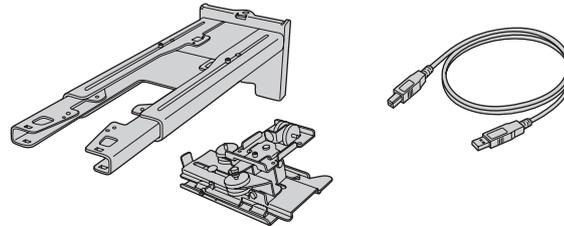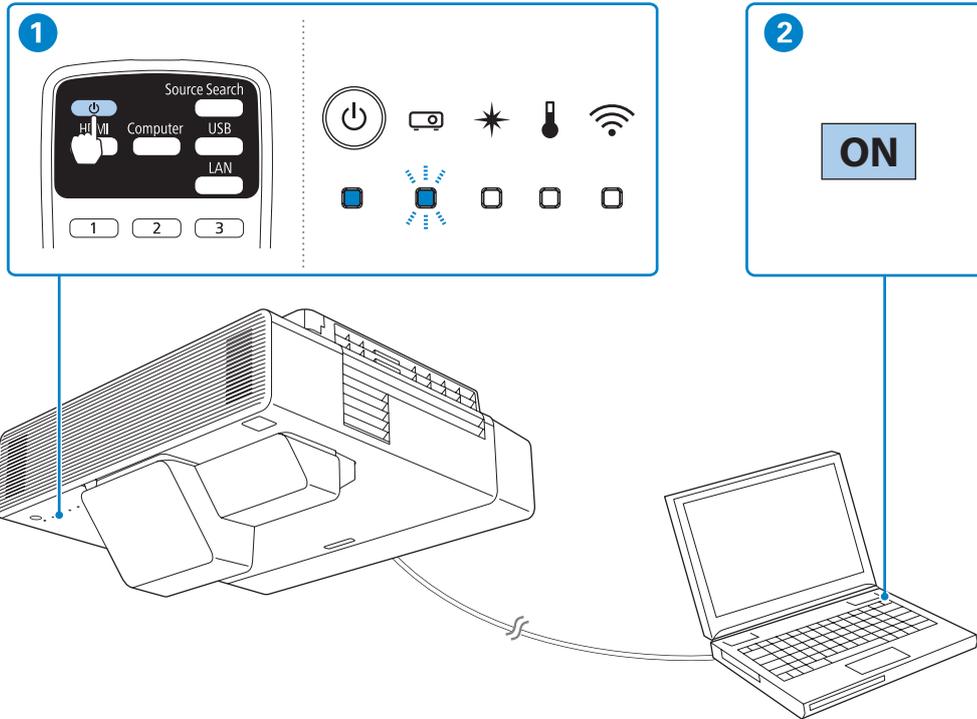
EB-1485Fi/EB-1480Fi only

EB-1485Fi only

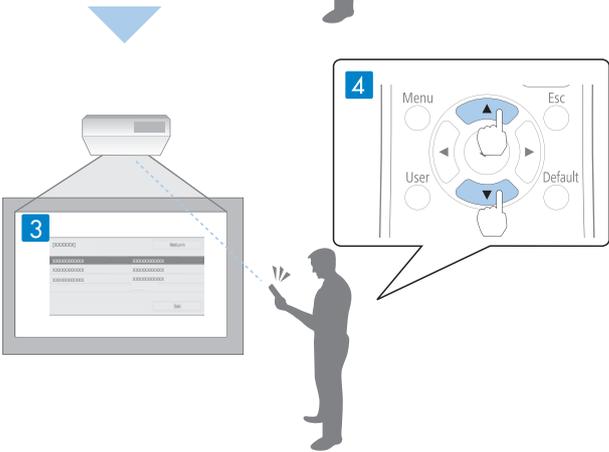## EB-1480Fi only

(Bundled items vary depending on the country)

WARNING PASSWORD PROTECTED
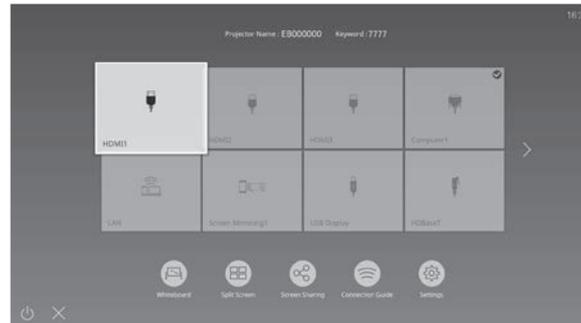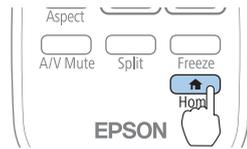
2

Turning On the Projector

❶

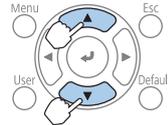Source Search

HDMI　Computer　USB

LAN

1　2　3

❷

ON

Initial Setting Wizard

4
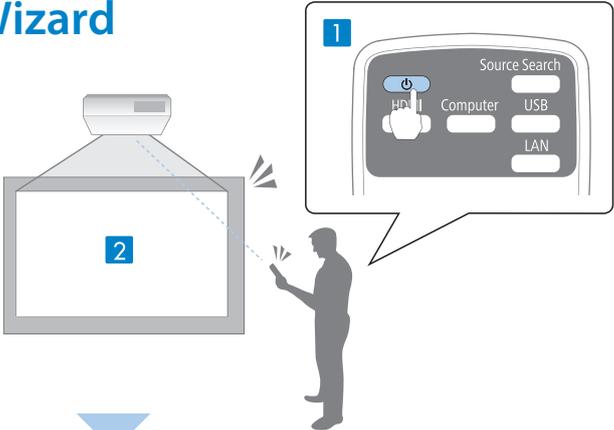
Home Screen

5

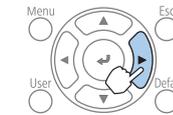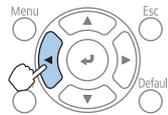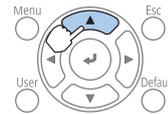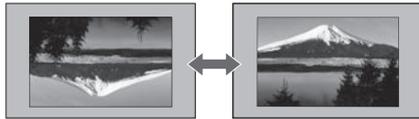# Adjusting the Image Shape
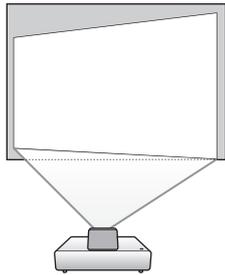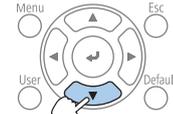
Changing the Projection Mode

5 Sec.

1

[Keystone]

| V-Keystone | 50 |
| H-Keystone | 50 |

2

6
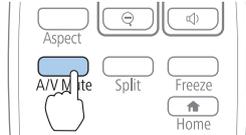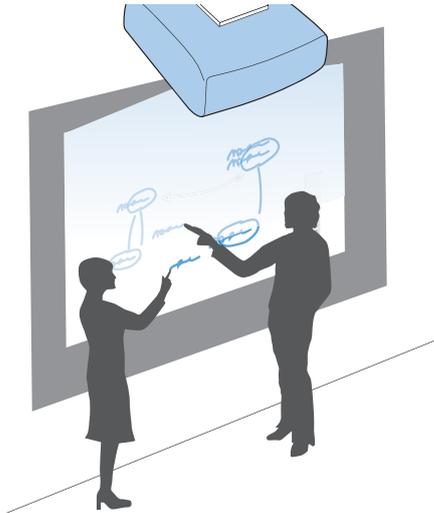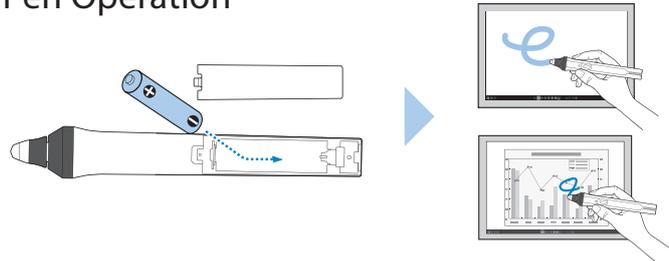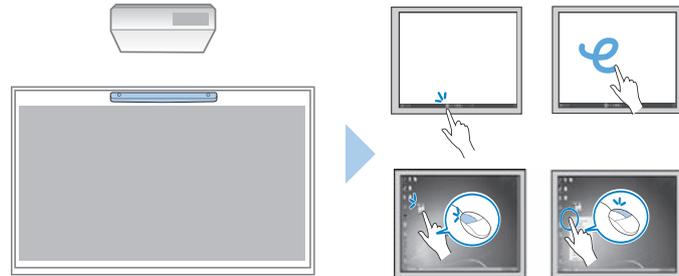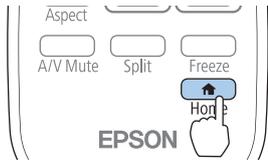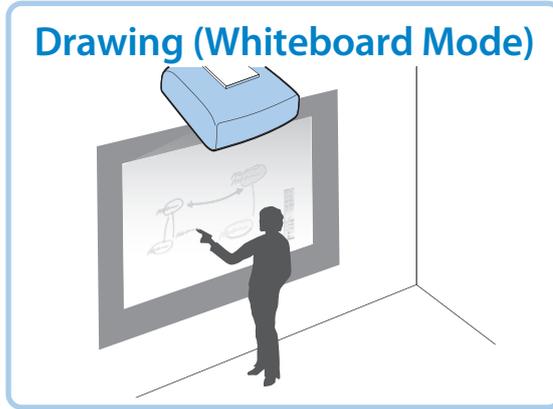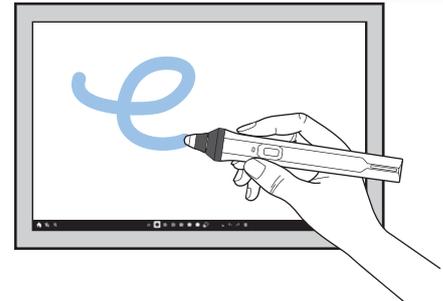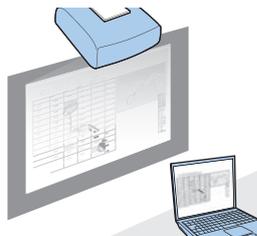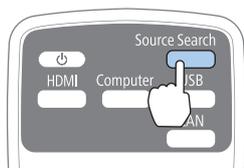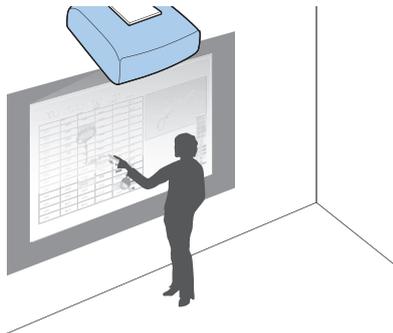
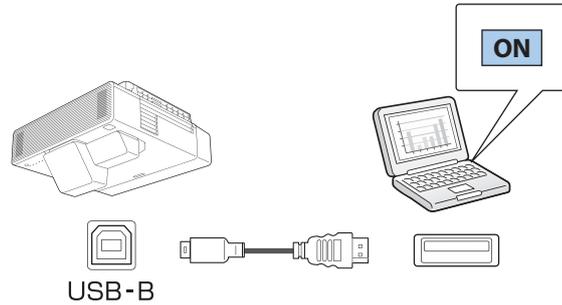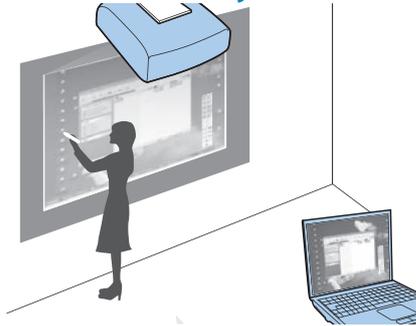# Easy Interactive Function (EB-1485Fi/EB-1480Fi)

Pen Operation

Finger Touch Operation
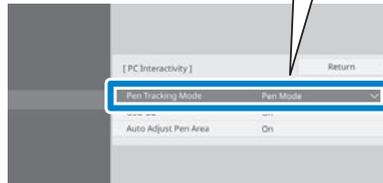
Drawing (Whiteboard Mode)

8

Whiteboard

9

Drawing (Annotation Mode)

PC Interactivity

ON

USB-B

[Pen/Touch] > [PC Interactivity] > [Pen Tracking Mode]

[PC Interactivity]   Return

Pen Tracking Mode   Pen Mode

Auto Adjust Pen Area   On

Windows/Mac: [Pen Mode]
Ubuntu: [Mouse Mode]

10
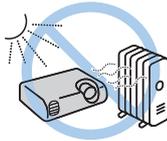
For More Information

epson.sn

EPSON
EXCEED YOUR VISION
Document CD-ROM

or

HEVC Advance™

Covered by one or more claims of the HEVC patents listed at patentlist.accessadvance.com.

413997100