

EPSON OPOS ADK for .NET Manual

Application Development Guide

POSPrinter

(TM-P60II/TM-P60IIPEELEER)

Version 1.14.6 Dec. 2017

Notes

- (1) Reproduction of any part of this documentation by any means is prohibited.
- (2) The contents of this documentation are subject to change without notice.
- (3) Comments and notification of any mistakes in this documentation are gratefully accepted.
- (4) This software cannot be used with other equipment that the specified.
- (5) EPSON will not be responsible for any consequences resulting from the use of any information in this documentation.

Trademarks

Microsoft®, Windows®, Windows Server® and Windows Vista® are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. IBM® and PC/AT® are trademarks or registered trademarks of International Business Machines Corporation in the United States, other countries, or both.

QR Code is a registered trademark of Denso Wave Incorporated.

Epson® and ESC/POS® are registered trademarks of Seiko Epson Corporation. Other product and company names used herein are for identification purposes only and may be trademarks or registered trademarks of their respective companies. Epson disclaims any and all rights in those marks.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Seiko Epson is under license. Other trademarks and trade names are those of their respective owners.

Contents

Chapter 1 Introduction	1
1.1 Terminology	1
Chapter 2 Before Using POSPrinter	3
2.1 Device Setup	3
2.2 Command execution during offline	3
2.3 Precautions and Restrictions	3
Chapter 3 Properties, Methods, and Events	6
3.1 Properties	6
3.2 Methods	11
3.3 Events	43
Appendix-A Revision history	47
A.1 EPSON OPOS ADK for .NET 1.14.6	47
A.2 EPSON OPOS ADK for .NET 1.12.8	47
Appendix-B SetupPOS Settings	48
B.1 Verbose Error Codes Check Box	49
B.2 CharacterSet Matches Device Check Box	49
B.3 Save Images in NVRAM Check Box	50
B.4 Ink on Paper for Completion Check Box	50
B.5 Halftone Method Combo Box	51
B.6 Device Font Type Combo Box	51
B.7 Receipt Width Combo Box(TM-P60II only)	52
B.8 Receipt Characters per Line Combo Box	52
B.9 Receipt Line Spacing (dots) Text Box	53
B.10 CharacterSet Combo Box	54
B.11 Receipt Line Spacing (dots) Text Box	55
Appendix-C Hardware Settings	56
Appendix-D Default Values of Properties	57
Appendix-E Escape Sequences	63
Appendix-F DeviceStatistics	65

Chapter 1 Introduction

This manual includes explanations on how to use a POSPrinter with EPSON OPOS ADK for .NET, as well as related items and device-specific precautions.

For details on the POS for .NET API, refer to the "UnifiedPOS Retail Peripheral Architecture Version 1.14.1" specification and the MSDN "POS for .NET v1.14.1 SDK Documentation": Refer to the release notes for information on where to find the latest information.

1.1 Terminology

- "UnifiedPOS Retail Peripheral Architecture Version 1.14.1" may be abbreviated as "UPOS".
- "Microsoft POS for .NET" may be abbreviated as "POS.NET".
- "EPSON OPOS ADK for .NETVersion 1.14.6" may be abbreviated as "OPOS.NET".
- "POSPrinter" and "printer" may be referred to as "device".
- "ServiceObject of POSPrinter provided by OPOS.NET" may be abbreviated as "ServiceObject".
- "ErrorCode properties of PosControlException" may be abbreviated as "ErrorCode".
- "ErrorCodeExtended properties of PosControlException" may be abbreviated as "ErrorCodeExtended".
- "**JrnLineChars**", "**RecLineChars**", "**SlpLineChars**" and other properties defined commonly for stations may appear as "**Stn**". For example, "**StnLineChars**" character strings for indicating stations.
- "Exception" indicates "PosControlException".
- The EPSON original device constant used with this device is defined in "jp.co.epson.uposcommon.EpsonUPOSConst" and "jp.co.epson.uposcommon.EpsonPOSPrinterConst".
- Inch: 1 inch is 25.4 mm.
- dpi is the number of dots per inch.
- The language specification of the device may be indicated as follows.
 ANK specification: Device without multi-byte characters
 JP specification: Japanese compatible device

- Wired LANs and wireless LANs may be referred to as networks.
- A “receipt”, “journal”, or “slip” indicates either a station or paper depending on the context.
- NVRAM indicates non-volatile random access memory.

Chapter 2 Before Using POSPrinter

This chapter includes explanations on how to set up a POSPrinter, as well as precautions and restrictions on use.

2.1 Device Setup

After checking the model and settings of the hardware, use the SetupPOS utility to select the correct device. For details on how to configure hardware, refer to “Hardware Settings” for each device in [“Appendix-C Hardware Settings”](#). For details on how to use the SetupPOS utility, refer to the User’s Reference Guide and [“Appendix-B SetupPOS Settings”](#).

2.2 Command execution during offline

When "command execution during offline" is enabled, you can perform operations such as registering a logo to the nonvolatile region of the device even when the printer status is set to "cover open" or "no paper."

This function is set using the TM-P60II utility. For details, refer to “TM-P60II Utility User’s Manual”.

PTR_DI_GET_OFFLINE_CONDITION of the **DirectIO** method can be used. For details on the **DirectIO** method, refer to [“3.2.5 DirectIO Method”](#) in this manual.

2.3 Precautions and Restrictions

- Not all Unicode characters can be printed even if CharacterSetUnicode is specified in the **CharacterSet** property. The assignment of Unicode characters to printable characters is limited to the characters installed on the device.
The character installed on a device varies depending on the device specification. Please refer to the product specification for your particular device
- Only DTR/DSR device flow control is supported.

- If you turn the device off and then on or open the cover during printing, unnecessary data may be printed.
- Wait at least five seconds after the device has been turned off before turning it back on.
- Using ESC|#E to send data may hinder the subsequent operations of the ServiceObject or cause an unexpected result because the sent data is not checked by ServiceObject.
- Sending a print control command is not recommended. Careful consideration is required before sending such a command.
- Any character code (Unicode) expressed in the string type is converted to a byte code based on the value set in the **CharacterSet** property. Be careful if you want to specify the extended ASCII code for byte code conversion.
- All properties and parameters of a method affected by the **MapMode** property are processed by “dot”. Therefore, when the **MapMode** property is other than MapMode.Dots, an error of ± 1 may be produced in the property and the parameter of the method affected by the **MapMode** property.

- Only a value described in the **RecLineCharsList** property can be set in the **RecLineChars** property. If a value other than a value described in the **RecLineCharsList** property is set, the value is set to the nearest value that is smaller in the **RecLineCharsList** property. However, an exception is thrown if a value larger than the largest value described in the **RecLineCharsList** property is set.
- If 254 or 255 is specified in the **CharacterSet** property and PTR_DI_NONE is the specification of the PTR_DI_BINARY_CONVERSION command of the **DirectIO** method, the Unicode encoding name becomes the system default encoding name.
- The print position (left justify/center/right justify) can be changed only at the beginning of a line.
- When NVRAM is used by the **SetBitmap** method, no consideration is given to other applications saving images to NVRAM.
- The device has a limit for the number of times the write to NVRAM operation can be performed. Try your utmost to avoid programming that involves using the **SetBitmap** method and **DirectIO** method for repeated saving and deleting because the write to NVRAM operation is performed when saving and deleting an image.
- The capacity of NVRAM for storing images differs depending on the settings of the device. Be extremely careful when replacing devices because the capacity of NVRAM for storing images is not considered at the ServiceObject.

Chapter 3 Properties, Methods, and Events

3.1 Properties

The properties listed below differ from functions described in UPOS.

3.1.1 CapPowerReporting Property

Description

Identifies the reporting capabilities of the device.

One of the following values is set.

Value	Meaning
PowerReporting.Standard	The value set when a Bluetooth connection is established. ServiceObject can determine and report two of the power states: OFF_OFFLINE (the device is off or offline) and ONLINE.
PowerReporting.Advanced	The value set when USB or network connection is established. ServiceObject can determine and report three of the power states: OFF, OFFLINE, and ONLINE.

3.1.2 CapCharacterSet Property

Description

This property is initialized by the **Open** method.

One of the following values is set.

Value	Meaning
CharacterSetCapability.Unicode	Able to print the equivalent to a Unicode character, within the limits of the printable characters of the device.

3.1.3 CharacterSet Property

Description

Only a value in the **CharacterSetList** property can be set.
The property is initialized to one of the following values.

Value	Meaning
CharacterSetUnicode(997)	Print an equivalent Unicode character, within the limits of the printable characters of the device.

This property is initialized by the **Open** method according to the SetupPOS setting "CharacterSet".

After the **Claim** method is executed, the value may be changed depending on the actual language specification of the device.

3.1.4 CharacterSetList Property

Description

This property is initialized by the **Open** method.

3.1.5 CapRecMarkFeed Property

Description

The property is updated by the following command of a **DirectIO** method.

```
PTR_DI_SET_PAPERLAYOUT
PTR_DI_OPERATION_MODE
```

3.1.6 MapCharacterSet

Description

Regardless of the **MapCharacterSet** property value, the Service perform mapping.

3.1.7 MapMode Property

Description

All properties and parameters of a method affected by the **MapMode** property are processed by "dot".

When the **MapMode** property is other than MapMode.Dots, an error of ± 1 may be produced in the property and the parameter of the method affected by the **MapMode** property.

3.1.8 RecLineChars Property**Description**

After the **Claim** method is executed, the value may be changed according to the specification of the device.

The property is updated by the following command of a **DirectIO** method.

```
PTR_DI_SET_PAPERLAYOUT
```

Only a value in the **RecLineCharsList** property can be set.

3.1.9 RecLineCharsList Property**Description**

After the **Claim** method is executed, the value may be changed according to the specification of the device.

The property is updated by the following command of a **DirectIO** method.

```
PTR_DI_SET_PAPERLAYOUT
```

3.1.10 RecLineSpacing Property**Description**

A value smaller than the **RecLineHeight** property can also be set for this property.

If a value smaller than the **RecLineHeight** property is set, it is changed to the value of the **RecLineHeight** property for operation. Character strings in the first and second lines do not overlap when printed.

3.1.11 RecLineWidth Property**Description**

After the **Claim** method is executed, the value may be changed according to the specification of the device.

The property is updated by the following command of a **DirectIO** method.

```
PTR_DI_SET_PAPERLAYOUT
```

3.1.12 RecLetterQuality Property

Description

When this property is changed, other properties, such as printing resolution and control method of the head are changed.

They vary depending on the head type of the station.

However, changing the printing resolution does not change the values of properties such as **RecLineWidth** and **RecLineSpacing**.

Station	Description of Change
Receipt	Setting/canceling of smoothing of double height/width characters. Changing of printing resolution.

3.1.13 RecSidewaysMaxLines Property

Description

After the **Claim** method is executed, the value may be changed according to the specification of the device.

3.1.14 PageModeArea Property

Description

PageModeArea property is set to the following value, irrespective of the SetupPOS utility setting.

- TM-P60II

Paper width	Value
60mm	432, 1624
58mm	420, 1624

- TM-P60IPEELER

388, 1624

The property is updated by the following command of a **DirectIO** method.

PTR_DI_SET_PAPERLAYOUT

3.1.15 DeviceEnabled Property

Description

When the **DeviceEnabled** property is set to TRUE first after the **Claim** method is executed, device initialization is performed.

In the following states, device initialization cannot be done:

- Offline (e.g. Cover open, out of paper, etc.)
- Error (e.g. Paper jam)

When the **DeviceEnabled** property is set to TRUE, the printer state is notified via a **StatusUpdateEvent**.

If the **StatusUpdateEvent** for the printer stat is not defined in UPOS, however, the **StatusUpdateEvent** cannot be notified. In this case, the printer status can be found by examining the exception that is notified when the method is executed.

If the device initialization cannot be done when the **DeviceEnabled** property is set to TRUE, a device status is checked at an interval of 1 second, and it is repeated until the device initialization is performed completely.

The device initialization status can be found by enabling the **PowerNotify** property.

When StatusPowerOnline is notified by a **StatusUpdateEvent**, the initialization process is complete.

In addition, the initialization process may take several seconds depending on the connection speed and the image registration status.

3.2 Methods

The methods listed below differ from functions described in UPOS.

3.2.1 Claim Method

Description

The device connection state is confirmed. If the device is not connected, or if the power is OFF, an exception is thrown. In the case of a Serial connection, the device connection state cannot be confirmed. In this case, Success is always returned.

3.2.2 Release Method

Description


The connection is disconnected at the port where the device is connected.

3.2.3 CheckHealth Method

Description

All functions of the **CheckHealth** method are supported.

Level	Outline of Function
HealthCheckLevel.Internal	The state of the device is checked based on the information held in the current ServiceObject (no action is taken on the device).
HealthCheckLevel.External	A test print of the following character strings is performed on the station selected currently. External HCheck !! EPSON UPOS ADK ServiceVersion=version of the ServiceObject DeviceName=device name
HealthCheckLevel.Interactive	The following dialog box appears.

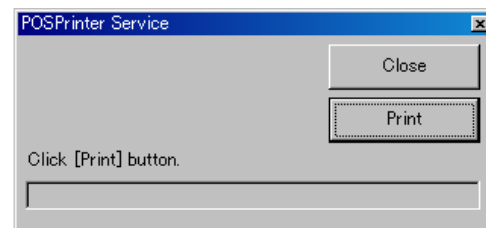

Press the Print button to perform the test.

A test print of the following character strings is performed on the station currently selected.

- Interactive HCheck !!
- EPSON UPOS ADK
- ServiceVersion=version of the ServiceObject
- DeviceName=device name

Press the Close button to end the test.

The results are stored in the **CheckHealthText** property.

And besides, the following value is retrieved as the returned value of method.

level	Value	Meaning
HealthCheckLevel.Internal	Internal HCheck: Successful	The CheckHealth method finished normally.
	Internal HCheck: Error-<Message>	The CheckHealth method finished with an error. The Message contains error information.
HealthCheckLevel.External	External HCheck: Successful	The CheckHealth method finished normally.
	External HCheck: Error-<Message>	The CheckHealth method finished with an error. The Message contains error information.
HealthCheckLevel.Interactive	Interactive HCheck: Canceled	The CheckHealth method finished without doing anything.
	Interactive HCheck: Complete	After the last operation ended normally, the CheckHealth method finished.
	Interactive HCheck: Error-<Message>	After the last operation finished with an error, the CheckHealth method finished. The Message contains error information.

3.2.4 ClearOutput Method

Description

In asynchronous mode, only output data that is non-transmitted transaction data is deleted. Therefore, data in the current transmission and data sent to the device but not printed is not deleted.

3.2.5 DirectIO Method

Description

This method can be used when the **DeviceEnabled** property is true. The **DirectIO** method supports the following functions.

command	Outline of Function
PTR_DI_OUTPUT_NORMAL	Sends the specified code to the device using flow control.
PTR_DI_OUTPUT_REALTIME	Sends the specified code to the device without using flow control.
PTR_DI_PANEL_SWITCH	Enables/disables the panel switch.
PTR_DI_RECOVER_ERROR	Recovers from a recoverable error.
PTR_DI_PRINT_FLASH_BITMAP2	Prints the bitmap saved to NVRAM.
PTR_DI_DELETE_NVIMAGE	Deletes the bitmap saved to NVRAM.
PTR_DI_CODE128_TYPE	Specifies the default code for Code128.
PTR_DI_BINARY_CONVERSION	Specifies the character string format specified in the parameter of the string type.
PTR_DI_GET_SUPPORT_FUNCTION	Returns the functions supported by the device currently connected.
PTR_DI_HARDWARE_RESET	Resets the device.
PTR_DI_RING_BUZZER	Executes buzzer control.
PTR_DI_GET_BATTERY_STATUS	Retrieves the current battery status.
PTR_DI_SET_PAPERLAYOUT (TM-P60IPEELER only)	Sets paper layout.
PTR_DI_GET_PAPERLAYOUT (TM-P60IPEELER only)	Obtains the setting of paper layout.
PTR_DI_OPERATION_MODE (TM-P60IPEELER only)	Sets paper operation mode.
PTR_DI_GET_OFFLINE_CONDITION	Acquires the printer status.

- **PTR_DI_OUTPUT_NORMAL Command**

Parameter

<i>command</i>	PTR_DI_OUTPUT_NORMAL
<i>data</i>	Not used
<i>object</i> (byte[]type)	Transmission data

Description

Sends data specified by the *object* parameter to the device directly using flow control.

Use this command only when sending an ESC/POS command to the device.

The ServiceObject does not check data sent by this command. Do not send ESC/POS commands that change the line feed amount or font size, since doing so will hinder the subsequent operations of the ServiceObject.

- **PTR_DI_OUTPUT_REALTIME Command**

Parameter

<i>command</i>	PTR_DI_OUTPUT_REALTIME
<i>data</i>	Not used
<i>object</i> (byte[]type)	Transmission data

Description

Sends data specified by the *object* parameter to the device directly without using flow control.

Use this command only when sending a real-time ESC/POS command to the device.

As this command is sent without using flow control, garbled printing may occur if there is any unsent data in the ServiceObject.

- **PTR_DI_PANEL_SWITCH Command**

Parameter

<i>command</i>	PTR_DI_PANEL_SWITCH
<i>data</i>	Specify ON/OFF (0 is OFF and 1 is ON)
<i>object</i>	Not used

Description

Enables/disables the panel switch.

The panel switch is enabled if *data* is set to ON (1) and disabled if *data* is set to OFF (0).

Depending on the type of device, there may be exceptions such as the following.

- During switch standby when a macro is being executed, the switch is enabled regardless of the setting.
- When the cover is open, the switch is disabled regardless of the setting.

- **PTR_DI_RECOVER_ERROR Command**

Parameter

<i>command</i>	PTR_DI_RECOVER_ERROR
<i>data</i>	Not used
<i>object</i>	Not used

Description

Recovers from a recoverable error.

This command sends the error recovery command to the device without using flow control.

Do not use this command when the device is in a non-recoverable error state.

- **PTR_DI_PRINT_FLASH_BITMAP2 Command**

Parameter

<i>command</i>	PTR_DI_PRINT_FLASH_BITMAP2
<i>data</i>	Specify the Bitmap key code
<i>object</i>	Print position (specify the alignment parameter to use with the PrintBitmap method).

Description

Prints the NV graphic corresponding to the key code specified by the bitmap number. The key code is specified by storing the first part in bits 31 to 16 and the second part in bits 15 to 0 of pData.

The key code corresponds to the two digits used to write the NV graphic in the logo utility. The first digit is the first byte of the key code, and the second digit is the second byte. If the NV graphic corresponding to the specified key code is not registered, nothing is printed.

The printing position matches the value specified in the Alignment parameter of PrintBitmap, but the type is different. It is specified by converting the numeric data into a character string.

- Example: Centering
`object = int.Parse(PosPrinter.PrinterBitmapCenter);`
- Example: 100 dots from the left edge
`object = int.Parse(100)`
- Example: Specifying key code
`int data = 0;`
`data += 126;`
`data += 32 << 16;`

Data format:

31	16	15	0
0 0 0 0 0 0 0 0 0 0 1 0 0 0 0 0		0 0 0 0 0 0 0 0 0 1 1 1 1 1 1 0	
First byte of key code		Second byte of key code	

- **PTR_DI_DELETE_NVIMAGE Command**

Parameter

<i>command</i>	PTR_DI_DELETE_NVIMAGE
<i>data</i>	Specify the key code to delete
<i>object</i>	Not used

Description

Deletes the image of the key code specified for the *data* parameter from NVRAM.

Use the key code reported by the **DirectIOEvent** event when **SetBitmap** is executed.

If the key code is specified by PTR_DI_DELETE_ALL, all the images saved to NVRAM are deleted.

If an image saved to NVRAM is deleted, the following information is also deleted.

- The image information of NVRAM on the PC.
- The registration information of the **SetBitmap** method associated with the key code to be deleted.

- **PTR_DI_CODE128_TYPE Command**

Parameter

<i>command</i>	PTR_DI_CODE128_TYPE
<i>data</i>	Specify one of the following. <ul style="list-style-type: none"> • PTR_DI_CODE_A • PTR_DI_CODE_B • PTR_DI_CODE_C
<i>object</i>	Not used

Description

Specifies the default code for the CODE128 barcode.

To print the CODE128 barcode, codes A, B, and C need to be specified at the beginning of the printing data. If they are not specified at the beginning of the printing data of the **PrintBarCode** method, use the code specified with this command to print the CODE128 barcode.

The default setting is PTR_DI_CODE_A.

- **PTR_DI_BINARY_CONVERSION Command**

Parameter

<i>command</i>	PTR_DI_BINARY_CONVERSION
<i>data</i>	Specify one of the following. <ul style="list-style-type: none"> • PTR_DI_BC_NONE • PTR_DI_BC_NIBBLE • PTR_DI_BC_DECIMAL
<i>object</i>	Not used

Description

Specifies the character string format specified in the parameter of the string type.

The specification is the same as that of the **BinaryConversion** property of OPOS.

Use this command for the printing of two-dimensional codes and for a **CharacterSet** property for which Unicode specification is not possible.

The setting of this command is valid for the following methods.

- **PrintBarcode** method
- **PrintNormal** method (only when the **CharacterSet** property is a blank page [255])
- **PrintImmediate** method (only when the **CharacterSet** property is a blank page [255])

- **PTR_DI_GET_SUPPORT_FUNCTION Command**

Parameter

<i>command</i>	PTR_DI_GET_SUPPORT_FUNCTION
<i>data</i>	Not used
<i>object</i>	Not used

Description

Indicates the functions supported by the currently connected device with the logical OR of the function flag, and stores the returned value in the Data property of DirectIOData.

The defined function flags are as follows.

Function Flag	Meaning
PTR_DI_BATTERY	Includes a function for notifying of battery status.

- **PTR_DI_HARDWARE_RESET Command**

Parameter

<i>command</i>	PTR_DI_HARDWARE_RESET
<i>data</i>	Not used
<i>object</i>	Not used

Description

Resets the device.

If this command is used, behavior of this software is the same as if the device has been turned off and then on.

This command cannot be used when there is a Bluetooth connection.

- **PTR_DI_RING_BUZZER Command**

Parameter

<i>command</i>	PTR_DI_RING_BUZZER
<i>data</i>	Specify the buzzer tone type.
<i>object</i>	Not used

Description

The buzzer tone sounds in accordance with the value specified for the *data* parameter.

The values that can be specified for the *data* parameter and their corresponding tones are as follows.

Value (Decimal) Buzzer Tone

48	Mute
49	1280 Hz tone sounds for 1000 msec
50	4100 Hz tone sounds for 1000 msec
51	1280 Hz tone sounds for 200 msec
52	4100 Hz tone sounds for 200 msec
53	1280 Hz tone sounds for 200 msec → mutes for 200 msec → sounds for 200 msec
54	4100 Hz tone sounds for 200 msec → mutes for 200 msec → sounds for 200 msec
55	1280 Hz tone sounds for 500 msec
56	4100 Hz tone sounds for 500 msec
57	1280 Hz tone sounds for 200 msec → mutes for 200 msec → sounds for 200 msec → mutes for 200 msec → sounds for 200 msec
58	4100 Hz tone sounds for 200 msec → mutes for 200 msec → sounds for 200 msec → mutes for 200 msec → sounds for 200 msec

- **PTR_DI_GET_BATTERY_STATUS Command**

Parameter

<i>command</i>	PTR_DI_GET_BATTERY_STATUS
<i>data</i>	Not used
<i>object</i>	Not used

Description

Retrieves the battery status of the device.

Indicates the battery status with the logical OR of the status flag, and stores the returned value in the Data property of DirectIOData.

The defined status flags are as follows.

Status Flag	Meaning
PTR_DI_POWERED_BY_AC	Being powered by AC power source
PTR_DI_POWERED_BY_BATTERY	Being powered by battery
PTR_DI_BATTERY_FULL	The battery level is sufficiently high
PTR_DI_BATTERY_MIDDLE	The battery level is low
PTR_DI_BATTERY_NEAR_EMPTY	The battery level is very low and charging is required, but the device is still operable
PTR_DI_BATTERY_CLOSE_EMPTY	The battery is close to empty and the device is inoperable

- **PTR_DI_SET_PAPERLAYOUT command**

Parameter

<i>command</i>	PTR_DI_SET_PAPERLAYOUT
<i>data</i>	Not used
<i>object</i> (String type)	The layout of the paper which is to be used (type)

Description

Sets the layout of the paper which is to be used.

In order to perform correct printing matching the layout of the paper, it is necessary to set the layout of the paper (type) in advance.

Specifies the values of the layout of the paper in *object*. Please set "MapMode.Metric" in **MapMode** property upon specifying the values. When specifying the values in *object*, the formats are as follows.

" The types of paper,sa,sb,sc,sd,se,sf"

Sets the values of appropriate paper for "the types of paper".

The values of each paper are as follows.

Roll paper	: 48
Label paper	: 49
Black marked label paper	: 50
Black marked roll paper	: 51

Sets the following values for "sa"~"sf".

Please pay special attention in handling this since the contents differ from one type of paper to another.


< roll paper (48)>

<i>sa</i>	:0
<i>sb</i>	:0
<i>sc</i>	:0
<i>sd</i>	:0
<i>se</i>	:0
<i>sf</i>	:The width of the paper

< label paper (49)>


<i>sa</i>	:The distance between the top of the label paper and the top of the next label paper
-----------	--

- sb* :The distance between the top of the label paper and the print starting position.
- sc* :The distance between the bottom of the label paper and the cutting position
- sd* :0
- se* :The distance between the bottom of the label paper and the bottom of the print area.
- sf* The width of the paper

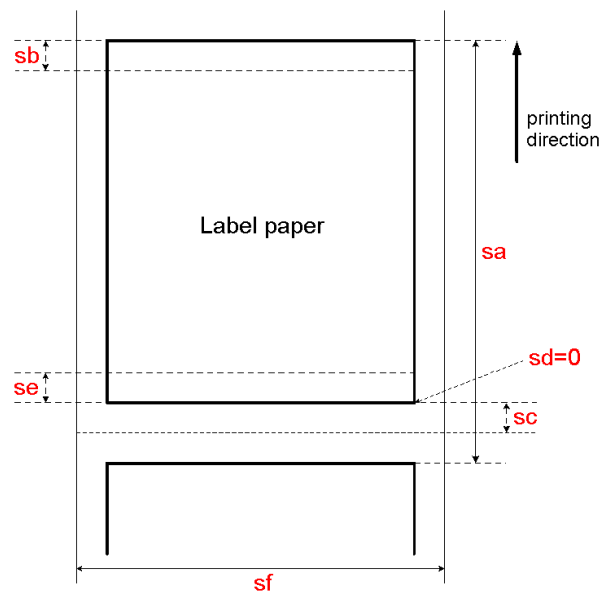

< Black marked label paper (50)>

- sa* :The distance between the bottom of the black marked label paper and the bottom of the next black marked label paper.
- sb* :The distance between the bottom of the black marked label paper and the print starting position.
- sc* :The distance between the top of the black marked label paper and the cutting position
- sd* :The distance between the top of the black marked label paper and the bottom of the black marked label paper.
- se* :The distance between the top of the black marked label paper and the bottom of the print area.
- sf* :The width of the paper

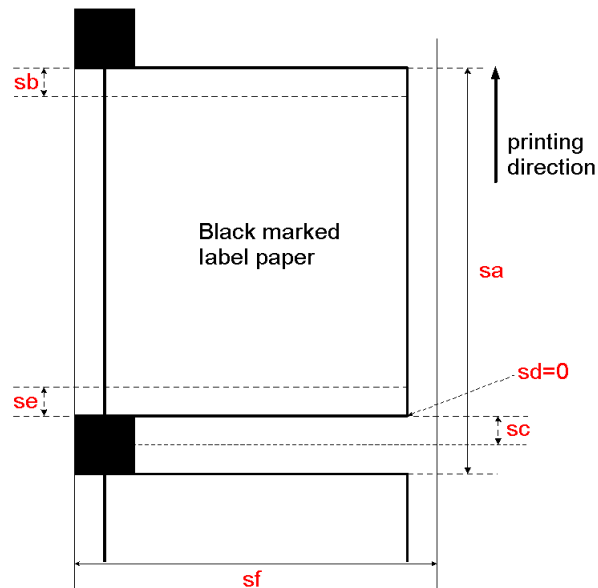

< Black marked roll paper (51)>

sa :The distance between the top of the black marked roll paper and the top of the the next black marked roll paper.


sb :The distance between the top of the black marked roll paper and the print starting position.

sc :The distance between the bottom of the black marked roll paper and the cutting position.

sd :0

se :0

sf :The width of the paper

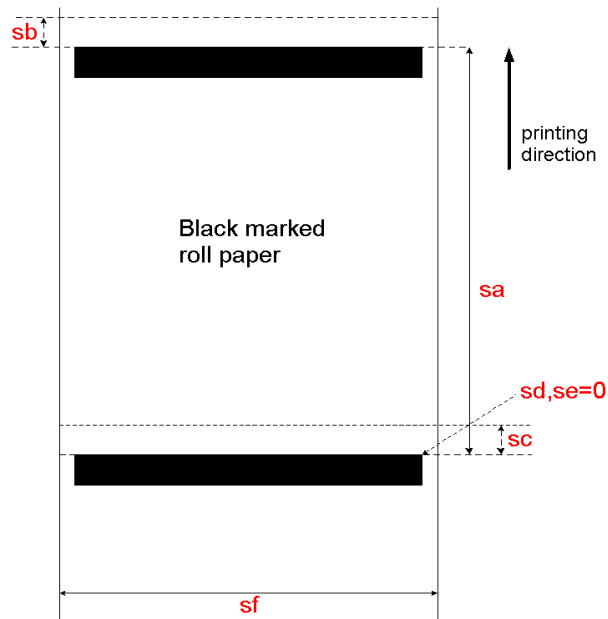

If other types of paper, not roll paper, are used, the automatic recognition for the layout setting of the paper is possible. When the automatic recognition of the layout setting is executed, please set "0" to specify "sa"'s value in *object*.

However, when using over 15cm ("sa"'s values) size label paper, black marked label paper and black marked roll paper, the automatic recognition of the layout setting cannot be executed.

If this command succeeds, the value of **CapRecMarkFeed** property is updated by the paper issuance mode set up.

Regarding the details of the value of **CapRecMarkFeed** property, refer to PTR_DI_OPERATION_MODE

In addition, the values of **RecLineWidth** property, **RecLineChars** property, **RecLineCharsList** property and **PageModeArea** property are updated by the values specified in *object* of paper type and paper width.

- **PTR_DI_GET_PAPERLAYOUT Command**

Parameter

<i>command</i>	PTR_DI_GET_PAPERLAYOUT
<i>data</i>	Not used
<i>object</i>	Not used

Description

Obtains the value of the current paper layout, then stores them.
Stores the values of the following formats in the returned value in the Object property of DirectIOData. When executing the command, please set "MapMode.Metric" in **MapMode** property.

" The type of paper,sa,sb,sc,sd,se,sf"

Regarding the details of the values, refer to
PTR_DI_SET_PAPERLAYOUT on the previous page.

- **PTR_DI_OPERATION_MODE Command**

Parameter

<i>command</i>	PTR_DI_OPERATION_MODE
<i>data</i>	Specification of issuance mode of the label
<i>object</i>	Not used

Description

Sets the issuance mode of the label.
Sets the way of issuing labels in *data*. Specifiable values are as follows.

The defined status flags are as follows.

Value	Issuance Mode
PTR_DI_SERIAL_MODE	Serial Issuance Mode
PTR_DI_PEEL_OFF_MODE	Peel-off Issuance Mode

If this command succeeds, the value of **CapRecMarkFeed** property is updated by the paper issuance mode set up.

Device Mode	Paper Type	CapRecMarkFeed
Peel-off Issuance Mode	Roll paper	PrinterMarkFeeds.None
	Black marked roll paper	PrinterMarkFeeds.NextTopOfForm PrinterMarkFeeds.CurrentTopOfForm
	Label paper	PrinterMarkFeeds.Takeup
	Black marked label paper	PrinterMarkFeeds.CurrentTopOfForm
Serial Issuance Mode	Roll paper	0
	Black marked roll paper	PrinterMarkFeeds.NextTopOfForm PrinterMarkFeeds.CurrentTopOfForm
	Label paper	PrinterMarkFeeds.Takeup
	Black marked label paper	PrinterMarkFeeds.NextTopOfForm PrinterMarkFeeds.CurrentTopOfForm

- **PTR_DI_GET_OFFLINE_CONDITION Command**

Parameter

<i>command</i>	PTR_DI_GET_OFFLINE_CONDITION
<i>data</i>	Not used
<i>object</i>	Not used

Description

Acquires the status of the currently connected printer from the device and stores the return value in the Data property of DirectIOData. Constants that can be specified for the *Data* parameter are shown below.

Constants that can be specified for the data parameter are shown below. If the E_ILLEGAL_EX_NOTSUPPORTED exception is thrown, use the TM-P60II Utility to enable the "Command execution during offline" option.

Value	Meaning
PTR_DI_CONDITION_ONLINE	Online
PTR_DI_CONDITION_RECEIPT_ONLY_OFFLINE	Receipt station is offline operations that do not involve printing can be executed.
PTR_DI_CONDITION_RECOVERBLE	Printer is in an error state; Recovery possible by recovery command.
PTR_DI_CONDITION_UNRECOVERBLE	Printer is in an error state; recovery only possible by rebooting the printer.

3.2.6 ResetStatistics Method

- **Parameter type: Microsoft.PointOfService.StatisticCategories**

Parameter

Microsoft.PointOfService.StatisticCategories

Specify one of the following.

- `StatisticCategories.Upos`
- `StatisticCategories.Manufacturer`
- `StatisticCategories.All`

Description

Of the items included in the specified category, only the items for which O appeared for the permission reset in "[Appendix-F DeviceStatistics](#)" are reset.

All the statistics supported by the ServiceObject are defined in UPOS. If "StatisticCategories.Manufacturer" is specified, nothing is reset.

- **Parameter type: *String[]***

Parameter

String[]

An array of the item names to reset

Description

Of the items included in the specified category, only the items for which O appears for the reset permission in "[Appendix-F DeviceStatistics](#)" are reset when "U_", "M_", or an empty string is specified for item names.

If an illegal item name or non-resettable item name is included, this method reports an error. When this happens, correctly specified items are also not reset.

All the statistics supported by the ServiceObject are defined in UPOS. If "M_" is specified, nothing is reset.

3.2.7 ResetStatistic Method

Description

Of the items included in the specified category, only the items for which O appears for the reset permission in "[Appendix-F DeviceStatistics](#)" are reset when "U_", "M_", or an empty string is specified for item names.

If an illegal item name or non-resettable item name is specified, this method reports an error.

All the statistics supported by the ServiceObject are defined in UPOS. If "M_" is specified, nothing is reset.

3.2.8 RetrieveStatistics Method

- **Parameter type: Microsoft.PointOfService.StatisticCategories**

Parameter

Microsoft.PointOfService.StatisticCategories

Specify one of the following.

- StatisticCategories.Upas
- StatisticCategories.Manufacturer
- StatisticCategories.All

Description

The Statistics supported by ServiceObject are all defined in UPOS. If "StatisticCategories.Manufacturer" is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

- **Parameter type: *String[]***

Parameter
<i>String[]</i>

Description

If an illegal item name is included, this method reports an error.

The Statistics supported by ServiceObject are all defined in UPOS. If “M_” is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

- **Parameter type: None**

Description

The information of all defined items is retrieved.

3.2.9 RetrieveStatistic Method

Description

If an illegal item name is included, this method reports an error.

If multiple item names separated by commas are specified (UPOS Specification), an error is reported.

The Statistics supported by ServiceObject are all defined in UPOS. If “M_” is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

3.2.10 UpdateStatistics Method

- **Parameter type: Microsoft.PointOfService.Statistic[]**

Parameter

Microsoft.PointOfService.Statistic[]

Specifies *Microsoft.PointOfService.Statistic* array for which item names and new values have been set.

Description

Of the items included in the specified category, only the items for which O appears for the update permission in “[Appendix-F DeviceStatistics](#)” are updated when "U_", "M_", or an empty string is specified for item names.

If an illegal item name or non-updatable item name is included, this method reports an error. In this case, correctly specified items are also not updated.

The Statistics supported by ServiceObject are all defined by UPOS. If “M_” is specified, nothing is updated.

- **Parameter type: Microsoft.PointOfService.StatisticCategories**

Parameter

Microsoft.PointOfService.StatisticCategories

Specify one of the following.

- StatisticCategories.Upas
- StatisticCategories.Manufacturer
- StatisticCategories.All

Object

Specify the new value after updating.

Description

Of the items included in the specified category, only the items for which O appeared for the update permission in “[Appendix-F DeviceStatistics](#)” are updated.

All the statistics supported by the ServiceObject are defined in UPOS. If “StatisticCategories.Manufacturer” is specified, nothing is update.

3.2.11 UpdateStatistic Method

Description

Of the items included in the specified category, only the items for which O appears for the update permission in “[Appendix-F DeviceStatistics](#)” are updated when "U_", "M_", or an empty string is specified for item names.

If an illegal item name or non-updatable item name is specified, this method reports an error.

The Statistics supported by ServiceObject are all defined by UPOS. If “M_” is specified, nothing is updated.

3.2.12 BeginInsertion Method

Description

This device the exception is thrown because there is not a slip station.

3.2.13 BeginRemoval Method

Description

This device the exception is thrown because there is not a slip station.

3.2.14 ChangePrintSide Method

Description

This device the exception is thrown because there is not a slip station.

3.2.15 MarkFeed Method

Description

If **CapRecMarkFeed** property is PrinterMarkFeeds.None, the exception of " there is no function" is thrown..

3.2.16 EndInsertion Method

Description

This device the exception is thrown because there is not a slip station.

3.2.17 EndRemoval Method

Description

This device the exception is thrown because there is not a slip station.

3.2.18 CutPaper Method

Description

If the *percentage* parameter is 0, the method process ends without sending the command.

If the *percentage* parameter is from 1 to 100, activate the cutter to perform a partial cut leaving one point uncut.

3.2.19 PrintNormal Method

Description

Although the UPOS specification is such that an error is generated during synchronous printing if there is no line feed code, printing is successful when this method is executed even if a character string contains no line feed code.

See the table “[Appendix-E Escape Sequences](#)” for escape sequences supported by this device.

3.2.20 PrintImmediate Method

Description

Although “this method tries to print its data immediately – that is, as the very next printer operation” is written in the UPOS, with ServiceObject, the data of multiple transactions may be sent to the device during asynchronous printing. Therefore, data of the **PrintImmediate** method may not be printed immediately.

Although the UPOS specification is such that an error is generated during synchronous printing if there is no line feed code, printing is successful when this method is executed even if a character string contains no line feed code.

See the table “[Appendix-E Escape Sequences](#)” for escape sequences supported by this device.

3.2.21 PrintTwoNormal Method

Description

This device has only one station, the exception is thrown.

3.2.22 RotatePrint Method

Description

An exception is thrown for each of the following conditions, so the following method cannot be used.

Rotation	Methods	Mode
PrintRotation.Right90	CutPaper	Rotated 90-degree print
PrintRotation.Left90	Same as above	Same as above

When ESC|#B is used to print an image, rotated printing takes places regardless of the PrintRotation.Bitmap specification of the *rotation* parameter.

In the case of rotated 90-degree print mode, the following escape sequences are ignored even if the device supports the functions.

- ESC | P
- ESC | fP
- ESC | sP
- ESC | sL
- ESC | #rF
- ESC | cA
- ESC | rA

The *alignment* parameter of each of the **SetBitmap** method, **PrintBitmap** method, **PrintMemoryBitmap** method, and **PrintBarCode** method is also ignored.

If the current print mode is PageMode print, it is not possible to switch to rotated 90-degree print mode or rotated 180-degree print mode.

If an exception is thrown when this method is called, the rotated print mode is not switched.

In the case of rotated 90-degree print mode, buffering data saved to the ServiceObject is not cleared.

3.2.23 PrintBarCode Method

Description

Although both of the following affect rotated printing, settings made with the **RotatePrint** method take priority.

In other words, the **RotateSpecial** property setting is ignored when rotated printing of barcodes is specified with the **RotatePrint** method.

- **RotatePrint** method (specify PrintRotation.Barcode for the *rotation* parameter)
- **RotateSpecial** property

In the case of rotated 90-degree printing, operation differs depending on whether data buffering is performed. For details, refer to UPOS.

The following types of barcode can be printed using the **PrintBarCode** method.

- CODE128
- CODE128 Parsed
- CODE93
- CODABAR
- ITF
- CODE39
- JAN13 (EAN13)
- JAN8 (EAN8)
- UPC-E
- UPC-A
- PDF417
- QR Code (QR Code Model 2)
- OTHER + 3 (QR Code Model 1)
- OTHER + 4 (QR Code Model 2)
- GS1-DataBar
- GS1-DataBar 128
- GS1-DataBar Expanded
- GS1-DataBar Stacked Omnidirectional
- GS1-DataBar Expanded Stacked
- Aztec Code
- Datamatrix Code
- OTHER + 5 (GS1-Data Truncated)
- OTHER + 6 (GS1-Data Limited)

- OTHER + 7 (GS1-Data Stacked)
- OTHER + 8 (GS1-Data Stacked Omnidirectional)
- OTHER + 9 (GS1-Data Expanded Stacked)
- 13172839 (PDF417, EAN-8)
- 13172840 (PDF417, EAN-13)
- 13172837 (PDF417, UPC-A)
- 13172838 (PDF417, UPC-E)
- 13172867 (PDF417, GS1-DataBar)
- 13173242 (PDF417, GS1-DataBar Truncated)
- 13173244 (PDF417, GS1-DataBar Stacked)
- 13173245 (PDF417, GS1-DataBar Stacked Omnidirectional)
- 13172869 (PDF417, GS1-DataBar Stacked Omnidirectional)
- 13173243 (PDF417, GS1-DataBar Limited)
- 13172868 (PDF417, GS1-DataBar Expanded)
- 13173246 (PDF417, GS1-DataBar Expanded Stacked)
- 13172870 (PDF417, GS1-DataBar Expanded Stacked)
- 13172856 (PDF417, GS1-DataBar 128)

3.2.24 PrintBitmap Method

Description

This method enables a jpeg file, gif file, or Windows bmp file to be specified.

The resolutions for printing images are as follows.

Station	Landscape	Portrait
Receipt	203 dpi	203 dpi

3.2.25 PrintMemoryBitmap Method

Description

Only bitmaps created from jpeg files, gif files, or Windows bmp files are supported. The resolutions for printing images are as follows.

Station	Landscape	Portrait
Receipt	203 dpi	203 dpi

3.2.26 SetBitmap Method**Description**

This method enables a jpeg file, gif file, and bmp file to be specified. This device can download images to non-volatile memory. Use SetupPOS to set whether to download to non-volatile memory. The upper limit for storing images is nine.

Non-volatile Memory:

Downloading can be performed until there is no longer any non-volatile memory available for storing images (memory capacity differs depending on the device settings).

The size of memory used to store one image can be calculated as follows.

Size = (((number of dots wide + 7) ÷ 8) × number of dots high + 16)

3.2.27 SetLogo Method**Description**

The following escape sequences cannot be specified in data saved using this method. If they are specified, an exception is thrown.

- ESC | tL
- ESC | bL

3.2.28 TransactionPrint Method**Description**

If the current rotated print mode is rotated 90-degree print mode, the mode cannot be switched to transaction mode.

When switching out of transaction mode, any buffering data saved to the ServiceObject in rotated 90-degree print mode is printed and rotated 90-degree print mode is maintained.

If an exception is thrown when this method is called, the transaction mode is not switched. Furthermore, buffering data saved to the ServiceObject while in transaction mode is not cleared.

3.2.29 PageModePrint Method

Description

Since an exception is thrown with the following conditions, the methods below cannot be used.

control	Methods	Mode
PageModePrintControl.PageMode	CutPaper RotatePrint	PageModePrint

With PageMode printing, the following escape sequences are ignored even if the device supports the function.

- ESC | P
- ESC | fP
- ESC | sP
- ESC | sL
- ESC | #rF
- ESC | #E

If the current rotation print mode is rotated 90-degree print mode or rotated 180-degree print mode, it is not possible to switch to PageMode printing.

If, while in the transaction printing mode, either of the **PageModePrint** methods, PageModePrintControl.Normal or PageModePrintControl.PrintSave are executed, the PageMode printing data is buffered into the transaction printing buffer.

Properties related PageMode is initialized with following values only when it calls with DeviceEnabled=true for the first time.

- PageModePrintArea(0,0,0,0)

The values saved in this property is set when the page mode is started by PageModePrint method. Also, It is not initialized even if page mode printing is terminated by the PageModePrint method.

When this method is invoked and an exception is thrown, the PageMode printing mode is not switched. In addition, with PageMode printing, data buffered in ServiceObject is not cleared.

3.3 Events

3.3.1 DirectIOEvent

The properties listed below differ from functions described in UPOS.

- **PTR_DIE_RESPONSE Event Number**

Property

<i>EventNumber</i>	PTR_DIE_RESPONSE
<i>Data</i>	0 (not used)
<i>Object</i>	Stores the response from the printer

Description

When the PTR_DI_OUTPUT_NORMAL or PTR_DI_OUTPUT_REALTIME command of the **DirectIO** method or the **PrintNormal** method/ **PrintImmediate** method involving ESC|#E results in the sending of an ESC/POS command that has a response from the device, the response is stored in the *Object* property and reported. The ESC/POS commands capable of notification as a response are as follows.

- ESC u
- ESC v
- GS I (printer ID of 1 byte)
- GS r
- DLE EOT
- DLE DC4 (specified status)
- GS (C
- GS (L
- GS 8 L
- GS (G

When a network connection is being used and the Ink on Paper for Completion check box of SetupPOS Settings is selected, this event cannot notify of the response from the printer.

- **PTR_DIE_SET_BITMAP_MODE Event Number**

Property

<i>EventNumber</i>	PTR_DIE_SET_BITMAP_MODE
<i>Data</i>	Image save method
<i>Object</i>	Stores the key code

Description

Notifies of the save method used when the **SetBitmap** method saved an image.

One of the following values is set to the *Data* property.

Data	Meaning
PTR_DIE_MEMORY	Stored in the ServiceObject
PTR_DIE_VRAM	Stored in volatile memory of the printer
PTR_DIE_NVRAM	Stored in NVRAM of the printer

If the image saved by the **SetBitmap** method uses NVRAM, the key code used when saving to the *Object* property is stored.

- **PTR_DIE_LABEL_REMOVAL Event Number (TM-P60IIPPEELER only)**

Property

<i>EventNumber</i>	PTR_DIE_LABEL_REMOVAL
<i>Data</i>	not used
<i>Object</i>	not used

Description

Notified when the output processing cannot be performed because of the waiting state of the label removal. The label removal event may not be notified if a mis-print occurred due to the execution of the RotatePrint method, and PageModePrint method.

- **PTR_DIE_LABEL_REMOVE_OK Event Number (TM-P60IPEELER only)**

Property

<i>EventNumber</i>	PTR_DIE_LABEL_REMOVE_OK
<i>Data</i>	not used
<i>Object</i>	not used

Description

Notified when the waiting state of the label removal was released.

Notified when the device became usual state by removing label that was causing label waiting.

3.3.2 ErrorEvent
Description

If the **DeviceEnabled** property becomes false while there is an **ErrorEvent** queued state, the ServiceObject assumes that the *ErrorResponse* property has been set to ErrorResponse.Retry and performs the corresponding processing. Therefore, asynchronous output data is output again when the **DeviceEnabled** property becomes true. To prevent this data from being output again, execute the **ClearOutput** method.

3.3.3 StatusUpdateEvent

Description

When the validation status is received from the device, Epson's enhanced **StatusUpdateEvent** event is reported.

The event generated and its meaning are shown below.

- **When Powered by an AC Power Source**

The following **StatusUpdateEvent** event notifies that the device is powered by an AC power supply and whether or not a battery is attached.

Value	Meaning
PTR_SUE_POWERED_BY_AC	Being powered by AC power source
PTR_SUE_BATTERY_OK	A battery cartridge is attached

- **When Powered by a Battery**

The following **StatusUpdateEvent** event notifies that the device is powered by a battery and indicates the battery level.

Value	Meaning
PTR_SUE_POWERED_BY_BATTERY	Being powered by battery
PTR_SUE_BATTERY_FULL	The battery level is sufficiently high
PTR_SUE_BATTERY_MIDDLE	The battery level is low
PTR_SUE_BATTERY_NEAR_EMPTY	The battery level is very low and charging is required
	The device is operable
PTR_SUE_BATTERY_CLOSE_EMPTY	The battery is close to empty and the device is inoperable

Appendix-A Revision history


A.1 EPSON OPOS ADK for .NET 1.14.6

(1) Microsoft POS for .NET 1.14.1 is supported.

A.2 EPSON OPOS ADK for .NET 1.12.8

(1) TM-P60IIPEELER is supported.

Appendix-B SetupPOS Settings

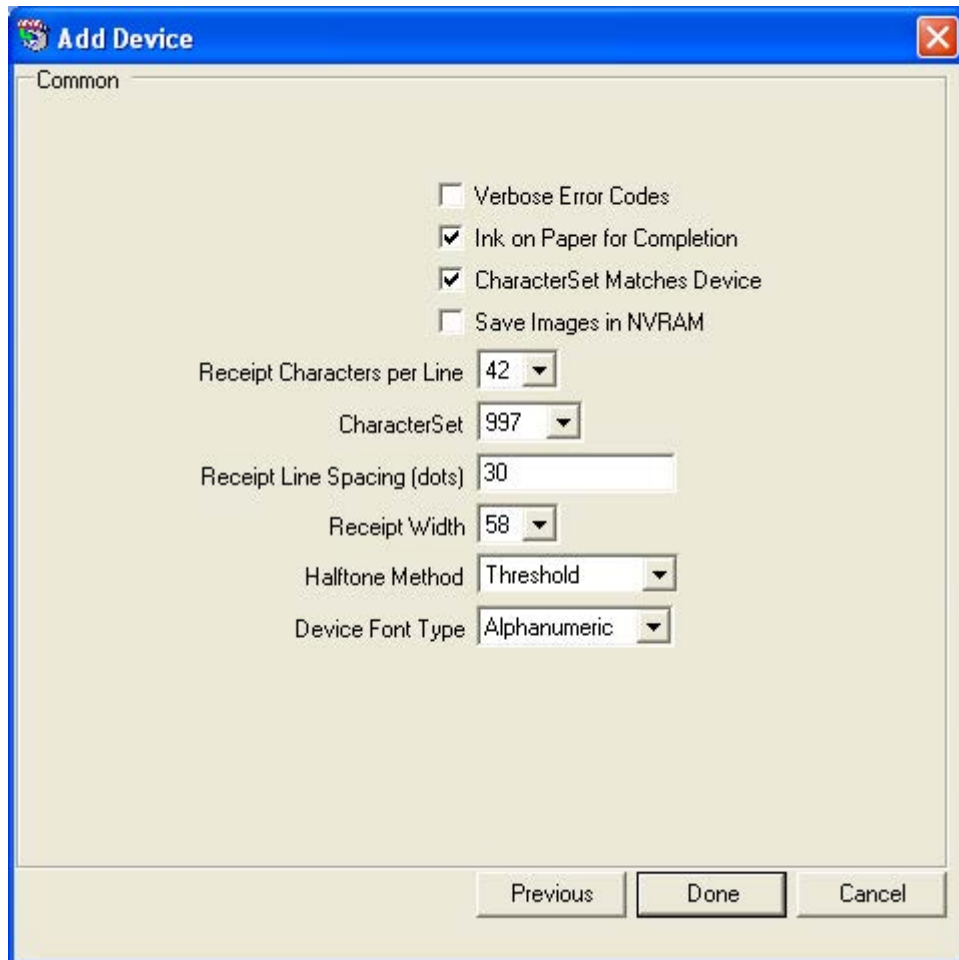

The above screen is the binding of TM-P60II.

B.1 Verbose Error Codes Check Box

Description

Sets the error code type for during output.

State	Meaning
Checkmark added	Sets the timeout to ErrorCodeExtended for an error that occurs during output.
No checkmark added	Sets the printer state as is to ErrorCode or ErrorCodeExtended, regardless of whether the error occurred during output.

Default: no checkmark added

For some devices, this setting is only possible when there is a network connection.

B.2 CharacterSet Matches Device Check Box

Description

Sets whether the setting for the international character set is changed automatically to match the value of the **CharacterSet** property.

State	Meaning
Checkmark added	Sets the international character set to match the value of the CharacterSet property.
No checkmark added	Sets the international character set of America in the CharacterSet property.

Default: checkmark added

B.3 Save Images in NVRAM Check Box

Description

Sets whether the image specified when executing the **SetBitmap** method is saved to NVRAM of the device.

State	Meaning
Checkmark added	Saves the image to NVRAM of the device.
No checkmark added	Does not save the image to NVRAM of the device.

- **When set to save the image to NVRAM of the device**

The saved image can even be printed if the application is restarted.

The key code saved to the *Object* property of the **DirectIOEvent** event is set.

Default: no checkmark added

B.4 Ink on Paper for Completion Check Box

Description

Sets whether to check that printing operation is complete.

State	Meaning
Checkmark added	Judges the printing method to be complete when the device completes printing.
No checkmark added	Judges the printing method to be complete when data output is complete.

- **When set to judge method output to be complete when the device completes printing**

Printing on the device and the printing method are not completely synchronized. The method can be completed quickly.

If the value of the **AsyncMode** property is set to true, the completion of printing is reported before the device actually completes printing because the **OutputCompleteEvent** event considers the printing method to be complete when the data output is complete.

Printing is judged to be successful if method output completes even when an error was generated on the device during printing.

Default: checkmark added

B.5 Halftone Method Combo Box

Description

Sets the halftone method type used during image printing (execution of **PrintBitmap** method).

Item	Meaning
Threshold	Uses the threshold method (monochrome conversion) on the specified image file, and then outputs it to the device.
Error Diffusion	Performs error diffusion processing on the specified image file, and then outputs it to the device.
Dithering	Performs dithering processing on the specified image file, and then outputs it to the device.

Default: Threshold

B.6 Device Font Type Combo Box

Description

Sets the multi-byte character font of the device.

Item	Meaning
None (ANK)	The device has no multi-byte character font.
Japanese	The device has a Japanese font.

Default: None (ANK)

B.7 Receipt Width Combo Box(TM-P60II only)

Description

Sets the receipt paper width.

Item	Meaning
58 mm	The receipt width is 58 mm.
60 mm	The receipt width is 60 mm.

Default: 58 mm

B.8 Receipt Characters per Line Combo Box

Description

Sets the default value for the number of characters on a line for receipt paper.

TM-P60II

Item	Meaning
In case of Receipt Width 58mm	
35	35 characters will be printed on one line.
42	42 characters will be printed on one line.
52	52 characters will be printed on one line.

Default: 42

In case of Receipt Width 60mm

36	36 characters will be printed on one line.
43	43 characters will be printed on one line.
54	54 characters will be printed on one line.

Default: 43

TM-P60IPEELER

Item	Meaning
32	32 characters will be printed on one line.
38	38 characters will be printed on one line.
48	48 characters will be printed on one line.

Default: 38

B.9 Receipt Line Spacing (dots) Text Box

Description

Sets the default value for the line spacing for receipt paper. Note that since the text cannot overlap for thermal printers, if this value is less than the value of the **RecLineHeight** property, the text will be printed using the value for the **RecLineHeight** property.

Value	Meaning
1 to 255	Receipt Line Spacing (units: dots) The spacing can be set in increments of 1 dot.

Default: 30

B.10 CharacterSet Combo Box

Description

Set the initial value of the **CharacterSet** property. Select from a Character Set list depending on the setting of the **CharacterSetList** property. Selectable values change depending on the Device Font Type Combo Box setting.

Item	Meaning
997	All the printable characters installed on device can be assigned to Unicode and printed.
437, 720, 737, 775, 850, 851, 852, 853, 855, 857, 858, 860, 861, 862, 863, 864, 865, 866, 869, 998, 999, 1098, 1125, 1250, 1251, 1252, 1253, 1254, 1255, 1256, 1257, 1258	Printed with the standard code page.
932	Only when DeviceFontType is set to "Japanese"
120, 121, 126, 130, 131, 150, 151, 152, 153, 154, 155, 255	Printed with the Device-specific Character CodePage.

Default: 997

B.11 Receipt Line Spacing (dots) Text Box

Description

Sets the default value for the line spacing for receipt paper. Note that since the text cannot overlap for thermal printers, if this value is less than the value of the **RecLineHeight** property, the text will be printed using the value for the **RecLineHeight** property.

Value	Meaning
1 to 255	Receipt Line Spacing (units: dots) The spacing can be set in increments of 1 dot.

Default: 30

Appendix-C Hardware Settings

- **DIP Switch Settings**

This device has no DIP Switch.

- **Memory Switch Settings**

Set the memory switches of this device as shown below.

Mem-SW 8

No.	Setting	
1	ON	Fixed to ON <small>Note 1</small>
2	ON	Settable
3	ON	Settable
4	ON	Settable
5	ON	Settable
6	-	
7	-	
8	-	

Note 1: The setting is fixed by the ServiceObject.

Appendix-D Default Values of Properties

● Common Settings

Property	Setting Value/Default Value	Range of Settings
CapCompareFirmwareVersion	false	—
CapPowerReporting	(Bluetooth connection) PowerReporting.Standard (Other connection) PowerReporting.Advanced	—
CapStatisticsReporting	true	—
CapUpdateFirmware	false	—
CapUpdateStatistics	true	—
CheckHealthText	“”	—
Claimed	false	—
DeviceEnabled	false	true, false
OutputID	0	—
PowerNotify	PowerNotification.Disabled	PowerNotification.Disabled, PowerNotification.Enabled
PowerState	PowerState.Unknown	—
DeviceDescription	Refer to “Device Specific Property Settings”.	—
DeviceName	Refer to “Device Specific Property Settings”.	—
State	ControlState.Idle	—
AsyncMode	false	true, false
CapCharacterSet	CharacterSetCapability.Unicode	Refer to “Settings Affecting Changing of Language”.
CapConcurrentJrnRec	false	—
CapConcurrentJrnSlp	false	—
CapConcurrentRecSlp	false	—
CapConcurrentPageMode	false	—
CapCoverSensor	true	—
CapMapCharacterSet	true	—
CapTransaction	true	—
CartridgeNotify	PrinterCartridgeNotify.Disabled	—
CharacterSet	CharacterSetCapability.Unicode	Refer to the SetupPOS Setting “CharacterSet Combo Box”.
CharacterSetList	Refer to “Settings Affecting Changing of Language”.	Refer to “Settings Affecting Changing of Language”.
ErrorLevel	PrinterErrorLevel.None	—
ErrorStation	PrinterStation.None	—
ErrorString	“”	—
FlagWhenIdle	false	true, false

FontTypefaceList	""	—
MapCharacterSet	false	—
MapMode	MapMode.Dots	MapMode.Dots, MapMode.Twips, MapMode.English, MapMode.Metric
PageModeArea	Refer to "Settings Related to PageMode".	—
PageModeDescriptor	Refer to "Settings Related to PageMode".	—
PageModeHorizontalPosition	Refer to "Settings Related to PageMode".	Refer to "Settings Related to PageMode".
PageModePrintArea	Refer to "Settings Related to PageMode".	Refer to "Settings Related to PageMode".
PageModePrintDirection	Refer to "Settings Related to PageMode".	Refer to "Settings Related to PageMode".
PageModeStation	PrinterStation.None	PrinterStation.Receipt
PageModeVerticalPosition	Refer to "Settings Related to PageMode".	Refer to "Settings Related to PageMode".
RotateSpecial	PrintRotation.Normal	PrintRotation.Normal, PrintRotation.Right90, PrintRotation.Left90, PrintRotation.Rotate180
CoverOpen	false	—

● **Settings Related to Receipts**

Property	Setting Value/Default Value	Range of Settings
CapRec2Color	false	—
CapRecBarCode	true	—
CapRecBitmap	true	—
CapRecBold	true	—
CapRecCartridgeSensor	PrinterCartridgeSensors.None	—
CapRecColor	PrinterColors.Primary	—
CapRecDhigh	true	—
CapRecDwide	true	—
CapRecDwideDhigh	true	—
CapRecEmptySensor	true	—
CapRecItalic	false	—
CapRecLeft90	true	—
CapRecMarkFeed	Refer to “Device Specific Property Settings”	—
CapRecNearEndSensor	true	—
CapRecPageMode	true	—
CapRecPapercut	Refer to “Device Specific Property Settings”	—
CapRecPresent	true	—
CapRecRight90	true	—
CapRecRotate180	true	—
CapRecStamp	false	—
CapRecUnderline	true	—
RecBarCodeRotationList	PrintRotation.Normal, PrintRotation.Right90, PrintRotation.Left90, PrintRotation.Rotate180	—
RecBitmapRotationList	PrintRotation.Normal, PrintRotation.Right90, PrintRotation.Left90, PrintRotation.Rotate180	—
RecCurrentCartridge	PrinterColors.Primary	—
RecCartridgeState	PrinterCartridgeStates.Unknown	—
RecEmpty	false	—
RecLetterQuality	false	true, false
RecLineChars	Refer to “Settings Affecting Changing of Paper Width”.	Refer to “Settings Affecting Changing of Paper Width”.
RecLineCharsList	Refer to “Settings Affecting Changing of Paper Width”.	—
RecLineHeight	(FontA) 24 (FontB) 24 (FontC) 16	The font height is adjusted to that of FontA, FontB or FontC specified in RecLineChars.
RecLineSpacing	30	1 to 255
RecLinesToPaperCut	Refer to “Device Specific Property Settings”	—
RecLineWidth	Refer to “Settings Affecting Changing of Paper Width”.	Refer to “Settings Affecting Changing of Paper Width”.
RecNearEnd	false	—
RecSidewaysMaxChars	(FontA) 135 (FontB) 162 (FontC) 203	—
RecSidewaysMaxLines	Refer to “Settings Affecting Changing of Paper Width”.	—

● Settings Affecting Changing of CharSetSet

Paper Width	Property	Setting Value/Default Value	Range of Settings
ANK	CapCharacterSet	CharacterSetCapability. Unicode	—
	CharacterSet	997	CharacterSetList のいずれかの値
	CharacterSetList	120,121,126,130,131,150,151,152,153,154,155,255,437,720,737,775,850,851,852,853,855,857,858,860,861,862,863,864,865,866,869,997,998,999,1098,1125,1250,1251,1252,1253,1254,1255,1256,1257,1258	—
Japanese	CapCharacterSet	CharacterSetCapability. Unicode	—
	CharacterSet	997	CharacterSetList のいずれかの値
	CharacterSetList	120,121,126,130,131,150,151,152,153,154,155,255,437,720,737,775,850,851,852,853,855,857,858,860,861,862,863,864,865,866,869,932,997,998,999,1098,1125,1250,1251,1252,1253,1254,1255,1256,1257,1258	—

● Settings Affecting Changing of Paper Width

TM-P60II

Paper Width	Property	Setting Value/Default Value	Range of Settings
58 mm	RecLineChars	42	1 to 52 Characters described in RecLineCharsList can be set. For any other value, if the set value is smaller than the maximum value supported by the printer, the value is set to the nearest value that is larger than the specified value in RecLineCharsList properties.
	RecLineCharsList	35, 42, 52	—
	RecLineWidth	420	—
	RecSidewaysMaxLines	The value resulting from the following calculation is set (after rounding it down to the nearest whole number). ((Value of RecLineWidth – 21 dots) ÷ (the largest value of RecLineSpacing and RecLineHeight)) + 1.	—
60 mm	RecLineChars	43	1 to 54 Characters described in RecLineCharsList can be set. For any other value, if the set value is smaller than the maximum value supported by the printer, the value is set to the nearest value that is larger than the specified value in RecLineCharsList properties.
	RecLineCharsList	36, 43, 54	—
	RecLineWidth	432	—

	RecSidewaysMaxLines	The value resulting from the following calculation is set (after rounding it down to the nearest whole number). $((\text{Value of RecLineWidth} - 21 \text{ dots}) \div (\text{the largest value of RecLineSpacing and RecLineHeight})) + 1.$	—
--	---------------------	--	---

TM-P60IPEELER

Paper Width	Property	Setting Value/Default Value	Range of Settings
-	RecLineChars	38	1 to 48 Characters described in RecLineCharsList can be set. For any other value, if the set value is smaller than the maximum value supported by the printer, the value is set to the nearest value that is larger than the specified value in RecLineCharsList properties.
	RecLineCharsList	32, 38, 48	—
	RecLineWidth	388	—
	RecSidewaysMaxLines	The value resulting from the following calculation is set (after rounding it down to the nearest whole number). $((\text{Value of RecLineWidth} - 21 \text{ dots}) \div (\text{the largest value of RecLineSpacing and RecLineHeight})) + 1.$	—

- Settings Related to PageMode

TM-P60II

Property	Setting Value/Default Value	Range of Settings
PageModeArea	(Paper width: 58.0mm) "420,1624" (Paper width: 60.0mm) "432,1624"	—
PageModeDescriptor	PageModeDescriptors.Barcode, PageModeDescriptors.Bitmap, PageModeDescriptors.BitmapRotate PageModeDescriptors.BarcodeRotate	—
PageModeHorizontalPosition	0	0 or more
PageModePrintArea	"0,0,0,0"	"X, Y, Width, Height" (Paper width: 58.0mm) X + Width <= 420 Y + Height <= 1624 (Paper width: 60.0mm) X + Width <= 432 Y + Height <= 1624
PageModePrintDirection	PageModePrintDirection.None	PageModePrintDirection.BottomToTop, PageModePrintDirection.LeftToRight, PageModePrintDirection.RightToLeft, PageModePrintDirection.TopToBottom
PageModeVerticalPosition	0	0 or more

TM-P60IPEELER

Property	Setting Value/Default Value	Range of Settings
PageModeArea	"388,1624"	—
PageModeDescriptor	PageModeDescriptors.Barcode, PageModeDescriptors.Bitmap, PageModeDescriptors.BitmapRotate PageModeDescriptors.BarcodeRotate	—
PageModeHorizontalPosition	0	0 or more
PageModePrintArea	"0,0,0,0"	X + Width <= 388 Y + Height <= 1624
PageModePrintDirection	PageModePrintDirection.None	PageModePrintDirection.BottomToTop, PageModePrintDirection.LeftToRight, PageModePrintDirection.RightToLeft, PageModePrintDirection.TopToBottom
PageModeVerticalPosition	0	0 or more

Appendix-E Escape Sequences

The following figure is about supported/unsupported Escape Sequences.

Device	Escape Sequence	Range of Settings
TM-P60II	ESC #P	0 to 100 (100)
	ESC #P	0 to 100 (100)
	ESC #sP	—
	ESC sL	—
	ESC #B	1 to 20
	ESC tL	0
	ESC bL	0
	ESC #F	0 to 9999 (1)
	ESC #uF	0 to 9999 (1)
	ESC #rF	—
	ESC #E	0 to 999 (1)
	ESC #T	—
	ESC bC	0
	ESC #uC	0 to 2 (1)
	ESC iC	—
	ESC #C	1
	ESC rvC	0
	ESC #sC	—
	ESC 1C	0
	ESC 2C	0
	ESC 3C	0
	ESC 4C	0
	ESC #hC	1 to 8 (1)
	ESC #vC	1 to 8 (1)
	ESC tbC	—
	ESC tpC	—
	ESC cA	0
	ESC rA	0
	ESC lA	0
	ESC N	0
	ESC #R	1 to 999999999
	ESC #stC	0 to 1(1)

The number in () is the value when # is omitted.
0 indicates the setting is possible.

Device	Escape Sequence	Range of Settings
TM-P60I/PEELER	ESC #P	—
	ESC #P	—
	ESC #sP	—
	ESC sL	—
	ESC #B	1 to 20
	ESC tL	O
	ESC bL	O
	ESC #F	0 to 9999 (1)
	ESC #uF	0 to 9999 (1)
	ESC #rF	—
	ESC #E	0 to 999 (1)
	ESC #T	—
	ESC bC	O
	ESC #uC	0 to 2 (1)
	ESC iC	—
	ESC #C	1
	ESC rvC	O
	ESC #sC	—
	ESC 1C	O
	ESC 2C	O
	ESC 3C	O
	ESC 4C	O
	ESC #hC	1 to 8 (1)
	ESC #vC	1 to 8 (1)
	ESC tbC	—
	ESC tpC	—
	ESC cA	O
	ESC rA	O
	ESC lA	O
	ESC N	O
	ESC #R	1 to 999999999
	ESC #stC	0 to 1(1)

The number in () is the value when # is omitted.
O indicates the setting is possible.

Appendix-F DeviceStatistics

TM-P60II

XML Definition Name	Description	Reset Permission	Update Permission
UnifiedPOSVersion	UPOS version	x	x
DeviceCategory	Device category	x	x
ManufactureName	Manufacturer name	x	x
ModelName	Device name	x	x
SerialNumber	Serial number	x	x
ManufactureDate	Manufacture date	x	x
MechanicalRevisionRevision	Device revision	x	x
FirmwareRevisionRevision	Firmware version	x	x
Interface	Interface	x	x
InstallationDate	Installation date	x	x
HoursPoweredCount	Operation time	O	x
CommunicationErrorCount	Communication error count	O	O
BarcodePrintedCount	Barcode print count	O	O
FormInsertionCount	Slip insertion count	x	x
HomeErrorCount	Mechanical error count	x	x
JournalCharacterPrintedCount	Journal character print count	x	x
JournalLinePrintedCount	Journal line print count	x	x
MaximumTempReachedCount	Head temperature error count	O	O
NVRAMWriteCount	NVRAM setting count	O	O
PaperCutCount	Paper cut count	O	x
FailedPaperCutCount	Paper cut failure count	O	O
PrinterFaultCount	Unrecoverable error count	O	O
PrintSideChangeCount	Slip side change count	x	x
FailedPrintSideChangeCount	Slip side change failure count	x	x
ReceiptCharacterPrintedCount	Receipt print character count	O	O
ReceiptLinePrintedCount	Receipt print line count	O	O
ReceiptLineFeedCount	Receipt line feed count	O	x
ReceiptCoverOpenCount	Receipt cover open count	O	O
SlipCharacterPrintedCount	Slip print character count	x	x
SlipLinePrintedCount	Slip print line count	x	x
SlipLineFeedCount	Slip line feed count	x	x
SlipCoverOpenCount	Slip cover open count	x	x
StampFiredCount	Stamp print count	x	x

O: Permitted
x: Not permitted

TM-P60IPEELER

XML Definition Name	Description	Reset Permission	Update Permission
UnifiedPOSVersion	UPOS version	x	x
DeviceCategory	Device category	x	x
ManufactureName	Manufacturer name	x	x
ModelName	Device name	x	x
SerialNumber	Serial number	x	x
ManufactureDate	Manufacture date	x	x
MechanicalRevisionRevision	Device revision	x	x
FirmwareRevisionRevision	Firmware version	x	x
Interface	Interface	x	x
InstallationDate	Installation date	x	x
HoursPoweredCount	Operation time	O	x
CommunicationErrorCount	Communication error count	O	O
BarcodePrintedCount	Barcode print count	O	O
FormInsertionCount	Slip insertion count	X	x
HomeErrorCount	Mechanical error count	X	x
JournalCharacterPrintedCount	Journal character print count	X	x
JournalLinePrintedCount	Journal line print count	X	x
MaximumTempReachedCount	Head temperature error count	O	O
NVRAMWriteCount	NVRAM setting count	O	O
PaperCutCount	Paper cut count	x	x
FailedPaperCutCount	Paper cut failure count	x	O
PrinterFaultCount	Unrecoverable error count	O	O
PrintSideChangeCount	Slip side change count	x	x
FailedPrintSideChangeCount	Slip side change failure count	x	x
ReceiptCharacterPrintedCount	Receipt print character count	O	O
ReceiptLinePrintedCount	Receipt print line count	O	O
ReceiptLineFeedCount	Receipt line feed count	O	x
ReceiptCoverOpenCount	Receipt cover open count	O	O
SlipCharacterPrintedCount	Slip print character count	x	x
SlipLinePrintedCount	Slip print line count	x	x
SlipLineFeedCount	Slip line feed count	x	x
SlipCoverOpenCount	Slip cover open count	x	x
StampFiredCount	Stamp print count	x	x

O: Permitted
x: Not permitted