

**EPSON OPOS ADK for .NET Manual**

# **Application Development Guide**

**POSPrinter  
(TM-T88III)**

Version 1.14.6 Dec. 2017

## **Notes**

- (1) Reproduction of any part of this documentation by any means is prohibited.
- (2) The contents of this documentation are subject to change without notice.
- (3) Comments and notification of any mistakes in this documentation are gratefully accepted.
- (4) This software cannot be used with other equipment than the specified.
- (5) EPSON will not be responsible for any consequences resulting from the use of any information in this documentation.

## **Trademarks**

Microsoft®, Windows®, Windows Server® and Windows Vista® are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. IBM® and PC/AT® are trademarks or registered trademarks of International Business Machines Corporation in the United States, other countries, or both. Epson® and ESC/POS® are registered trademarks of Seiko Epson Corporation. Other product and company names used herein are for identification purposes only and may be trademarks or registered trademarks of their respective companies. Epson disclaims any and all rights in those marks.

# Contents

---



---

|  |           |
|--|-----------|
| <b>Chapter 1 Introduction</b>                    | <b>1</b>  |
| 1.1 Terminology .....                            | 1         |
| <b>Chapter 2 Before Using POSPrinter</b>         | <b>3</b>  |
| 2.1 Device Setup .....                           | 3         |
| 2.2 Precautions and Restrictions .....           | 3         |
| <b>Chapter 3 Properties, Methods, and Events</b> | <b>5</b>  |
| 3.1 Properties .....                             | 5         |
| 3.2 Methods.....                                 | 10        |
| 3.3 Events .....                                 | 32        |
| <b>Appendix-A Revision history</b>               | <b>34</b> |
| A.1 EPSON OPOS ADK for .NET 1.14.6.....          | 34        |
| A.2 EPSON OPOS ADK for .NET 1.12.....            | 34        |
| A.3 EPSON OPOS ADK for .NET 1.11.....            | 34        |
| A.4 EPSON OPOS ADK for .NET 1.9.....             | 34        |
| A.5 EPSON OPOS ADK for .NET 1.8.....             | 34        |
| <b>Appendix-B SetupPOS Settings</b>              | <b>36</b> |
| B.1 Verbose Error Codes Check Box .....          | 36        |
| B.2 CharSet Matches Device Check Box .....       | 37        |
| B.3 Ink on Paper for Completion Check Box .....  | 38        |
| B.4 Halftone Method Combo Box .....              | 39        |
| B.5 Device Font Type Combo Box .....             | 39        |
| B.6 CharSet Combo Box.....                       | 40        |
| <b>Appendix-C HardWare Settings</b>              | <b>41</b> |
| <b>Appendix-D Default Values of Properties</b>   | <b>43</b> |
| <b>Appendix-E Escape Sequences</b>               | <b>48</b> |
| <b>Appendix-F DeviceStatistics</b>               | <b>49</b> |

# Chapter 1 Introduction

---

This manual includes explanations on how to use a POSPrinter with EPSON OPOS ADK for .NET, as well as related items and device-specific precautions.

For details on the POS for .NET API, refer to the "UnifiedPOS Retail Peripheral Architecture Version 1.14.1" specification and the MSDN "POS for .NET v1.14.1 SDK Documentation": Refer to the release notes for information on where to find the latest information.

## 1.1 Terminology

- "UnifiedPOS Retail Peripheral Architecture Version 1.14.1" may be abbreviated as "UPOS".
- "Microsoft POS for .NET" may be abbreviated as "POS.NET".
- "EPSON OPOS ADK for .NET Version 1.14.6" may be abbreviated as "OPOS.NET".
- "POSPrinter" and "printer" may be referred to as "device".
- "ServiceObject of POSPrinter provided by OPOS.NET" may be abbreviated as "ServiceObject".
- "ErrorCode properties of PosControlException" may be abbreviated as "ErrorCode".
- "ErrorCodeExtended properties of PosControlException" may be abbreviated as "ErrorCodeExtended".
- "**JrnLineChars**", "**RecLineChars**", "**SlpLineChars**" and other properties defined commonly for stations may appear as "**Stn**". For example, "**StnLineChars**" character strings for indicating stations.
- "Exception" indicates "PosControlException".
- The EPSON original device constant used with this device is defined in "jp.co.epson.uposcommon.EpsonUPOSConst" and "jp.co.epson.uposcommon.EpsonPOSPrinterConst".
- Inch: 1 inch is 25.4 mm.
- "dpi" is the number of dots per inch.
- The language specification of the device may be indicated as follows.  
 ANK specification: Device without multi-byte characters  
 JP specification: Japanese compatible device
- Wired LANs and wireless LANs may be referred to as networks.

- A “receipt”, “journal”, or “slip” indicates either a station or paper depending on the context.
- NVRAM indicates non-volatile random access memory.

## Chapter 2 Before Using POSPrinter

---

This chapter includes explanations on how to set up a POSPrinter, as well as precautions and restrictions on use.

### 2.1 Device Setup

After checking the model and settings of the hardware, use the SetupPOS utility to select the correct device. For details on how to configure hardware, refer to “Hardware Settings” for each device in [“Appendix-C Hardware Settings”](#). For details on how to use the SetupPOS utility, refer to the User’s Reference Guide and [“Appendix-B SetupPOS Settings”](#).

### 2.2 Precautions and Restrictions

- Only DTR/DSR device flow control is supported.
- If you turn the device off and then on or open the cover during printing, unnecessary data may be printed.
- Wait at least five seconds after the device has been turned off before turning it back on.
- Using ESC|#E to send data may hinder the subsequent operations of the ServiceObject or cause an unexpected result because the sent data is not checked by ServiceObject.
- Sending a print control command is not recommended. Careful consideration is required before sending such a command.
- Not all Unicode characters can be printed even if PosCommon.CharacterSetUnicode is specified in the **CharacterSet** property. The assignment of Unicode characters to printable characters is limited to the characters installed on the device. The characters installed on a device vary depending on the device specification. Please refer to the product specification for your particular device.
- Any character code (Unicode) expressed in the string type is converted to a byte code based on the value set in the **CharacterSet** property. Be careful if you want to specify the extended ASCII code for byte code conversion.
- All properties and parameters of a method affected by the **MapMode** property are processed by “dot”. Therefore, when the **MapMode** property is other than MapMode.Dots, an error of  $\pm 1$  may be produced in the property and the parameter of the method affected by the **MapMode** property.

- Only a value described in the **Stn LineCharsList** property can be set in the **Stn LineChars** property. If a value other than a value described in the **Stn LineCharsList** property is set, the value is set to the nearest value that is smaller in the **Stn LineCharsList** property. However, an exception is thrown if a value larger than the largest value described in the **Stn LineCharsList** property is set.
- If 254 or 255 is specified in the **CharacterSet** property and PTR\_DI\_NONE is the specification of the PTR\_DI\_BINARY\_CONVERSION command of the **DirectIO** method, the Unicode encoding name becomes the system default encoding name.

## Chapter 3 Properties, Methods, and Events

---

### 3.1 Properties

The properties listed below differ from functions described in UPOS.

#### 3.1.1 CapPowerReporting Property

##### Description

Identifies the reporting capabilities of the device.

One of the following values is set.

| Value                   | Meaning  |
|-------------------------|--|
| PowerReporting.Standard | The value set when a serial connection is established.<br>ServiceObject can determine and report two of the power states: OFF_OFFLINE (the device is off or offline) and ONLINE. |
| PowerReporting.Advanced | The value set when a parallel, USB and network connection is established.<br>ServiceObject can determine and report three of the power states: OFF, OFFLINE, and ONLINE.         |

#### 3.1.2 CapCharacterSet Property

##### Description

This property is initialized by the **Open** method according to the “Multi Byte Character Type” setting of SetupPOS utility. However, after the **Claim** method is executed, the value may be changed depending on the actual language of the device.

One of the following values is set.

| Value                          | Meaning   |
|--------------------------------|---|
| CharacterSetCapability.Unicode | Able to print the equivalent to a Unicode character, within the limits of the printable characters of the device. |



### 3.1.3 CharacterSet Property

#### Description

Only a value in the **CharacterSetList** property can be set.

If the value of the property is set to 932, the print character for the ASCII code 0x5C is changed to the yen mark (¥).

The property is initialized to one of the following values.

| Value                    | Meaning   |
|--------------------------|---|
| CharacterSetUnicode(997) | Print an equivalent Unicode character, within the limits of the printable characters of the device. |

This property is initialized by the **Open** method according to the SetupPOS setting "CharacterSet".

After the **Claim** method is executed, the value may be changed depending on the actual language specification of the device.

The same Unicode code point is assigned to some characters which are defined in both the device Kanji and non-Kanji character tables.

e.g.:

U+0391(Greek Capital Letter Alpha)

CharacterSet 932(Shift-JIS) 0x839F

CharacterSet 737(Greek) 0x80

If the **CharacterSet** property is set to 997 or 932, data will be printed using the Kanji font.

To print a single-byte character, please set the **CharacterSet** property to 737.

### 3.1.4 CharacterSetList Property

#### Description

This property is initialized by the **Open** method according to the "Multi Byte Character Type" setting of SetupPOS.

However, after the **Claim** method is executed, the value may be changed depending on the actual language specification of the device.

### 3.1.5 MapMode Property

#### Description

All properties and parameters of a method affected by the **MapMode** property are processed by “dot”.

When the **MapMode** property is other than MapMode.Dots, an error of  $\pm 1$  may be produced in the property and the parameter of the method affected by the **MapMode** property.

### 3.1.6 RecLineChars Property

#### Description

After the **Claim** method is executed, the value may be changed according to the specification of the device.

Only a value in the **RecLineCharsList** property can be set.

### 3.1.7 RecLineCharsList Property

#### Description

After the **Claim** method is executed, the value may be changed according to the specification of the device.

### 3.1.8 RecLineSpacing Property

#### Description

A value smaller than the **RecLineHeight** property can also be set.

If a value smaller than the **RecLineHeight** property is set, it is changed to the value of the **RecLineHeight** property for operation. Character strings in the first and second lines do not overlap when printed.

### 3.1.9 RecLineWidth Property

#### Description

After the **Claim** method is executed, the value may be changed according to the specification of the device.

**3.1.10 RecLetterQuality Property****Description**

When this property is changed, other properties, such as printing resolution and control method of the head are changed.

They vary depending on the head type of the station.

However, changing the printing resolution does not change the values of properties such as **RecLineWidth** and **RecLineSpacing**.

| <b>Station</b> | <b>Description of Change</b>  |
|----------------|---|
| Receipt        | Setting/canceling of smoothing of double height/width characters.<br>Changing of printing resolution. |

**3.1.11 RecSidewaysMaxChars Property****Description**

After the **Claim** method is executed, the value may be changed according to the specification of the device.

**3.1.12 RecSidewaysMaxLines Property****Description**

After the **Claim** method is executed, the value may be changed according to the specification of the device.

### 3.1.13 DeviceEnabled Property

#### Description

When the **DeviceEnabled** property is set to TRUE first after the **Claim** method is executed, device initialization is performed.

In the following states, device initialization cannot be done:

- Offline (e.g. Cover open, out of paper, etc.)
- Error (e.g. Paper jam)

When the **DeviceEnabled** property is set to TRUE, the printer state is notified via a **StatusUpdateEvent**.

If the **StatusUpdateEvent** for the printer stat is not defined in UPOS, however, the **StatusUpdateEvent** cannot be notified. In this case, the printer status can be found by examining the exception that is notified when the method is executed.

If the device initialization cannot be done when the **DeviceEnabled** property is set to TRUE, a device status is checked at an interval of 1 second, and it is repeated until the device initialization is performed completely.

The device initialization status can be found by enabling the **PowerNotify** property.

When StatusPowerOnline is notified by a **StatusUpdateEvent**, the initialization process is complete.

In addition, the initialization process may take several seconds depending on the connection speed and the image registration status.

## **3.2 Methods**

The methods listed below differ from functions described in UPOS.

### **3.2.1 Claim Method**

#### **Description**

The device connection state is confirmed. If the device is not connected, or if the power is OFF, an exception is thrown. In the case of a Serial connection, the device connection state cannot be confirmed. In this case, Success is always returned. In the case of a USB connection where the "Port Name Type" is set to "Device Name", if the printer is in an error state, an exception is thrown.

### **3.2.2 Release Method**


#### **Description**

The connection is disconnected at the port where the device is connected.

### 3.2.3 CheckHealth Method Description

All functions of the **CheckHealth** method are supported.

| Level                        | Outline of Function  |
|------------------------------|--|
| HealthCheckLevel.Internal    | The state of the device is checked based on the information held in the current ServiceObject (no action is taken on the device).  |
| HealthCheckLevel.External    | A test print of the following character strings is performed on the station selected currently.<br>External HCheck !!<br>EPSON UPOS ADK<br>ServiceVersion=version of the ServiceObject<br>DeviceName=device name |
| HealthCheckLevel.Interactive | The following dialog box appears.  |

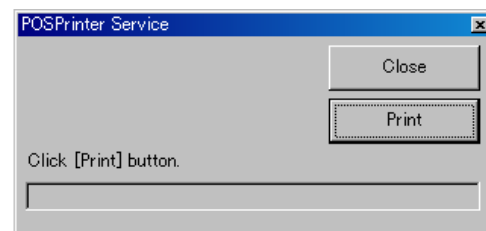

Press the Print button to perform the test.

A test print of the following character strings is performed on the station currently selected.

- Interactive HCheck !!
- EPSON UPOS ADK
- ServiceVersion=version of the ServiceObject
- DeviceName=device name

Press the Close button to end the test.

The results are stored in the **CheckHealthText** property.

And besides, the following value is retrieved as the returned value of method.

| level                        | Value                               | Meaning   |
|------------------------------|-------------------------------------|---|
| HealthCheckLevel.Internal    |                                     |   |
|                              | Internal HCheck: Successful         | The <b>CheckHealth</b> method finished normally.  |
|                              | Internal HCheck: Error-<Message>    | The <b>CheckHealth</b> method finished with an error.<br>The Message contains error information.                                    |
| HealthCheckLevel.External    |                                     |   |
|                              | External HCheck: Successful         | The <b>CheckHealth</b> method finished normally.  |
|                              | External HCheck: Error-<Message>    | The <b>CheckHealth</b> method finished with an error.<br>The Message contains error information.                                    |
| HealthCheckLevel.Interactive |                                     |   |
|                              | Interactive HCheck: Canceled        | The <b>CheckHealth</b> method finished without doing anything.  |
|                              | Interactive HCheck: Complete        | After the last operation ended normally, the <b>CheckHealth</b> method finished.  |
|                              | Interactive HCheck: Error-<Message> | After the last operation finished with an error, the <b>CheckHealth</b> method finished.<br>The Message contains error information. |

### 3.2.4 ClearOutput Method

#### Description

In asynchronous mode, only output data that is non-transmitted transaction data is deleted. Therefore, data in the current transmission and data sent to the device but not printed is not deleted.

### 3.2.5 DirectIO Method

#### Description

This method can be used when the **DeviceEnabled** property is true. The **DirectIO** method supports the following functions.

| Command                      | Outline of Function  |
|------------------------------|--|
| PTR_DI_OUTPUT_NORMAL         | Sends the specified code to the device using flow control.                           |
| PTR_DI_OUTPUT_REALTIME       | Sends the specified code to the device without using flow control.                   |
| PTR_DI_PANEL_SWITCH          | Enables/disables the panel switch.   |
| PTR_DI_RECOVER_ERROR         | Recovers from a recoverable error.   |
| PTR_DI_PRINT_FLASH_BITMAP    | Prints the bitmap saved to NVRAM.  |
| PTR_DI_CODE128_TYPE          | Specifies the default code for Code128.  |
| PTR_DI_BINARY_CONVERSION     | Specifies the character string format specified in the parameter of the string type. |
| PTR_DI_GET_SUPPORT_FUNCTION  | Returns the functions supported by the device currently connected.                   |
| PTR_DI_RING_BUZZER_WITH_TIME | Executes buzzer control.   |



- **PTR\_DI\_OUTPUT\_NORMAL Command**

| Parameter                  |                      |
|----------------------------|----------------------|
| <i>command</i>             | PTR_DI_OUTPUT_NORMAL |
| <i>data</i>                | Not used             |
| <i>object</i> (byte[]type) | Transmission data    |

**Description**

Sends data specified by the *object* parameter to the device directly using flow control.

Use this command only when sending an ESC/POS command to the device.

The ServiceObject does not check data sent by this command. Do not send ESC/POS commands that change the line feed amount or font size, since doing so will hinder the subsequent operations of the ServiceObject.

- **PTR\_DI\_OUTPUT\_REALTIME Command**

| Parameter                  |                        |
|----------------------------|------------------------|
| <i>command</i>             | PTR_DI_OUTPUT_REALTIME |
| <i>data</i>                | Not used               |
| <i>object</i> (byte[]type) | Transmission data      |

**Description**

Sends data specified by the *object* parameter to the device directly without using flow control.

Use this command only when sending a real-time ESC/POS command to the device.

As this command is sent without using flow control, garbled printing may occur if there is any unsent data in the ServiceObject.

In the case of a network connection, a command cannot be sent without using flow control. Therefore, an exception is thrown if this command is executed when the device is in a busy state.

## ● PTR\_DI\_PANEL\_SWITCH Command

### Parameter

---

|                |                                       |
|----------------|---------------------------------------|
| <i>command</i> | PTR_DI_PANEL_SWITCH                   |
| <i>data</i>    | Specify ON/OFF (0 is OFF and 1 is ON) |
| <i>object</i>  | Not used                              |

### Description

Enables/disables the panel switch.

The panel switch is enabled if *data* is set to ON (1) and disabled if *data* is set to OFF (0).

Depending on the type of device, there may be exceptions such as the following.

- During switch standby when a macro is being executed, the switch is enabled regardless of the setting.
- When the cover is open, the switch is disabled regardless of the setting.

## ● PTR\_DI\_RECOVER\_ERROR Command

### Parameter

---

|                |                      |
|----------------|----------------------|
| <i>command</i> | PTR_DI_RECOVER_ERROR |
| <i>data</i>    | Not used             |
| <i>object</i>  | Not used             |

### Description

Recovers from a recoverable error.

This command sends the error recovery command to the device without using flow control.

Do not use this command when the device is in a non-recoverable error state.

In the case of a network connection, a command cannot be sent without using flow control. Therefore, an exception is thrown if this command is executed when the device is in a busy state.

- **PTR\_DI\_PRINT\_FLASH\_BITMAP Command**

**Parameter**


---

|                             |   |
|-----------------------------|---|
| <i>command</i>              | PTR_DI_PRINT_FLASH_BITMAP   |
| <i>data</i>                 | Specify the number (1 to 255) of the bitmap to print.   |
| <i>object</i> (String type) | Printing position (specify the number of the alignment parameter to use with the <b>PrintBitmap</b> method ). |

**Description**

Prints the bitmap in NVRAM that corresponds to the bitmap number specified for the *data* parameter.

If there is no bitmap saved to NVRAM, nothing is printed.

If the printer has no NVRAM bit image printing function, an exception is thrown. The value specified for the printing position is the same as that specified in the *alignment* parameter of the **PrintBitmap** method.

Use the TMFLogo utility to save to NVRAM.

The Save Images in NVRAM check box of SetupPOS Settings has no effect on this command.

If the stored image is larger than the available printable area or larger than the printable area specified with the alignment parameter, only the part inside the printable area is printed.

- **PTR\_DI\_CODE128\_TYPE Command**

**Parameter**


---

|                |   |
|----------------|---|
| <i>command</i> | PTR_DI_CODE128_TYPE   |
| <i>data</i>    | Specify one of the following. <ul style="list-style-type: none"> <li>• PTR_DI_CODE_A</li> <li>• PTR_DI_CODE_B</li> <li>• PTR_DI_CODE_C</li> </ul> |
| <i>object</i>  | Not used  |

**Description**

Specifies the default code for the CODE128 barcode.

To print the CODE128 barcode, codes A, B, and C need to be specified at the beginning of the printing data. If they are not specified at the beginning of the printing data of the **PrintBarCode** method, use the code specified with this command to print the CODE128 barcode.

The default setting is PTR\_DI\_CODE\_A.

- **PTR\_DI\_BINARY\_CONVERSION Command**

**Parameter**


---

|                |   |
|----------------|---|
| <i>command</i> | PTR_DI_BINARY_CONVERSION  |
| <i>data</i>    | Specify one of the following. <ul style="list-style-type: none"> <li>• PTR_DI_BC_NONE</li> <li>• PTR_DI_BC_NIBBLE</li> <li>• PTR_DI_BC_DECIMAL</li> </ul> |
| <i>object</i>  | Not used  |

**Description**

Specifies the character string format specified in the parameter of the string type.

The specification is the same as that of the **BinaryConversion** property of OPOS.

Use this command for the printing of two-dimensional codes and for a **CharacterSet** property for which Unicode specification is not possible.

The setting of this command is valid for the following methods.

- **PrintBarcode** method
- **PrintNormal** method (only when the **CharacterSet** property is a blank page [254, 255])
- **PrintImmediate** method (only when the **CharacterSet** property is a blank page [254, 255])

- **PTR\_DI\_GET\_SUPPORT\_FUNCTION Command**

| Parameter      |                             |
|----------------|-----------------------------|
| <i>command</i> | PTR_DI_GET_SUPPORT_FUNCTION |
| <i>data</i>    | Not used                    |
| <i>object</i>  | Not used                    |

**Description**

Indicates the functions supported by the currently connected device with the logical OR of the function flag, and stores the returned value in the Data property of DirectIOData.

The value 0 is always stored in the Data property.

- **PTR\_DI\_RING\_BUZZER\_WITH\_TIME Command**

| Parameter      |   |
|----------------|---|
| <i>command</i> | PTR_DI_RING_BUZZER_WITH_TIME                        |
| <i>data</i>    | Specifies the buzzer operating time (milliseconds). |
| <i>object</i>  | Not used  |

**Description**

Sounds the buzzer for the time specified with the *data* parameter.

The settable buzzer operating time is 0 to 510 milliseconds.

This command can only be executed when the device is used with a network connection. If other connections are used, an exception is thrown.

### 3.2.6 ResetStatistics Method

- **Parameter type: *Microsoft.PointOfService.StatisticCategories***

#### Parameter

---

*Microsoft.PointOfService.StatisticCategories*

Specify one of the following.

- *StatisticCategories.Upos*
- *StatisticCategories.Manufacturer*
- *StatisticCategories.All*

#### Description

Of the items included in the specified category, only the items for which O appeared for the permission reset in "[Appendix-F DeviceStatistics](#)" are reset.

All the statistics supported by the ServiceObject are defined in UPOS. If "StatisticCategories.Manufacturer" is specified, nothing is reset.

- **Parameter type: *String[]***

#### Parameter

---

*String[]*

An array of the item names to reset

#### Description

Of the items included in the specified category, only the items for which O appears for the reset permission in "[Appendix-F DeviceStatistics](#)" are reset when "U\_", "M\_", or an empty string is specified for item names.

If an illegal item name or non-resettable item name is included, this method reports an error. When this happens, correctly specified items are also not reset.

All the statistics supported by the ServiceObject are defined in UPOS. If "M\_" is specified, nothing is reset.

### 3.2.7 ResetStatistic Method

#### Description

Of the items included in the specified category, only the items for which O appears for the reset permission in "[Appendix-F DeviceStatistics](#)" are reset when "U\_", "M\_", or an empty string is specified for item names. If an illegal item name or non-resettable item name is specified, this method reports an error.

All the statistics supported by the ServiceObject are defined in UPOS. If "M\_" is specified, nothing is reset.

### 3.2.8 RetrieveStatistics Method

- **Parameter type:** *Microsoft.PointOfService.StatisticCategories*

#### Parameter

---

*Microsoft.PointOfService.StatisticCategories*

Specify one of the following.

- *StatisticCategories.Upos*
- *StatisticCategories.Manufacturer*
- *StatisticCategories.All*

#### Description

The Statistics supported by ServiceObject are all defined in UPOS. If "StatisticCategories.Manufacturer" is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.



- **Parameter type: *String[]***

| Parameter       |
|-----------------|
| <i>String[]</i> |

**Description**

If an illegal item name is included, this method reports an error.

The Statistics supported by ServiceObject are all defined in UPOS. If “M\_” is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

- **Parameter type: None**

**Description**

The information of all defined items is retrieved.

**3.2.9 RetrieveStatistic Method****Description**

If an illegal item name is included, this method reports an error.

If multiple item names separated by commas are specified (UPOS Specification), an error is reported.

The Statistics supported by ServiceObject are all defined in UPOS. If “M\_” is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

### 3.2.10 UpdateStatistics Method

- Parameter type: *Microsoft.PointOfService.Statistic[]*

#### Parameter

---

*Microsoft.PointOfService.Statistic[]*

Specifies *Microsoft.PointOfService.Statistic* array for which item names and new values have been set.

#### Description

Of the items included in the specified category, only the items for which O appears for the update permission in “[Appendix-F DeviceStatistics](#)” are updated when "U\_", "M\_", or an empty string is specified for item names.

If an illegal item name or non-updatable item name is included, this method reports an error. In this case, correctly specified items are also not updated.

The Statistics supported by ServiceObject are all defined by UPOS. If “M\_” is specified, nothing is updated.

- **Parameter type:** *Microsoft.PointOfService.StatisticCategories*

#### Parameter

---

*Microsoft.PointOfService.StatisticCategories*

Specify one of the following.

- *StatisticCategories.Upas*
- *StatisticCategories.Manufacturer*
- *StatisticCategories.All*

*Object*

Specify the new value after updating.

#### Description

Of the items included in the specified category, only the items for which O appeared for the update permission in “[Appendix-F DeviceStatistics](#)” are updated.

All the statistics supported by the ServiceObject are defined in UPOS. If “StatisticCategories.Manufacturer” is specified, nothing is update.

### 3.2.11 UpdateStatistic Method

#### Description

Of the items included in the specified category, only the items for which O appears for the update permission in “[Appendix-F DeviceStatistics](#)” are updated when “U\_”, “M\_”, or an empty string is specified for item names.

If an illegal item name or non-updatable item name is specified, this method reports an error.

The Statistics supported by ServiceObject are all defined by UPOS. If “M\_” is specified, nothing is updated.

### 3.2.12 BeginInsertion Method

#### Description

This device the exception is thrown because there is not a slip station.

### 3.2.13 BeginRemoval Method

#### Description

This device the exception is thrown because there is not a slip station.

### 3.2.14 ChangePrintSide Method

#### Description

This device the exception is thrown because there is not a slip station.

### 3.2.15 MarkFeed Method

#### Description

**CapRecMarkFeed** property is PrinterMarkFeeds.None the exception of "there is no function" is thrown.

### 3.2.16 EndInsertion Method

#### Description

This device the exception is thrown because there is not a slip station.

### 3.2.17 EndRemoval Method

#### Description

This device the exception is thrown because there is not a slip station.

### 3.2.18 CutPaper Method

#### Description

If the *percentage* parameter is 0, the method process ends without sending the command.

If the *percentage* parameter is from 1 to 100, activate the cutter to perform a partial cut leaving one point uncut.

### 3.2.19 PrintNormal Method

#### Description

Although the UPOS specification is such that an error is generated during synchronous printing if there is no line feed code, printing is successful when this method is executed even if a character string contains no line feed code.

See the table “[Appendix-E Escape Sequences](#)” for escape sequences supported by this device.

### 3.2.20 PrintImmediate Method

#### Description

Although “this method tries to print its data immediately – that is, as the very next printer operation” is written in the UPOS, with ServiceObject, the data of multiple transactions may be sent to the device during asynchronous printing. Therefore, data of the **PrintImmediate** method may not be printed immediately.

Although the UPOS specification is such that an error is generated during synchronous printing if there is no line feed code, printing is successful when this method is executed even if a character string contains no line feed code.

See the table “[Appendix-E Escape Sequences](#)” for escape sequences supported by this device.

### 3.2.21 PrintTwoNormal Method

#### Description

This device has only one station, the exception is thrown.

### 3.2.22 RotatePrint Method

#### Description

An exception is thrown for each of the following conditions, so the following method cannot be used.

| Rotation              | Methods         | Mode                    |
|-----------------------|-----------------|-------------------------|
| PrintRotation.Right90 | <b>CutPaper</b> | Rotated 90-degree print |
| PrintRotation.Left90  | Same as above   | Same as above           |

When ESC|#B is used to print an image, rotated printing takes places regardless of the PrintRotation.Bitmap specification of the *rotation* parameter.

In the case of rotated 90-degree print mode, the following escape sequences are ignored even if the device supports the functions.

- ESC | P
- ESC | fP
- ESC | sP
- ESC | sL
- ESC | #rF
- ESC | cA
- ESC | rA

The *alignment* parameter of each of the **SetBitmap** method, **PrintBitmap** method, **PrintMemoryBitmap** method, and **PrintBarCode** method is also ignored.

If the current print mode is PageMode print, it is not possible to switch to rotated 90-degree print mode or rotated 180-degree print mode.

If an exception is thrown when this method is called, the rotated print mode is not switched.

In the case of rotated 90-degree print mode, buffering data saved to the ServiceObject is not cleared.

### 3.2.23 PrintBarCode Method

#### Description

Although both of the following affect rotated printing, settings made with the **RotatePrint** method take priority.

In other words, the **RotateSpecial** property setting is ignored when rotated printing of barcodes is specified with the **RotatePrint** method.

- **RotatePrint** method (specify PrintRotation.Barcode for the *rotation* parameter)
- **RotateSpecial** property

In the case of rotated 90-degree printing, operation differs depending on whether data buffering is performed. For details, refer to UPOS.

The following types of barcode can be printed using the **PrintBarCode** method.

- CODE128
- CODE128 Parsed
- CODE93
- CODABAR
- ITF
- CODE39
- JAN13 (EAN13)
- JAN8 (EAN8)
- UPC-E
- UPC-A

### 3.2.24 PrintBitmap Method

#### Description

This method enables a jpeg file, gif file, or Windows bmp file to be specified.

The resolutions for printing images are as follows.

| Device                           | Landscape | Portrait |
|----------------------------------|-----------|----------|
| <b>T88III (Station: Receipt)</b> |           |          |
| Paper width: 58mm                | 180 dpi   | 180 dpi  |
| Paper width: 80mm                | 180 dpi   | 180 dpi  |

### 3.2.25 PrintMemoryBitmap Method

#### Description

Only bitmaps created from jpeg files, gif files, or Windows bmp files are supported. The resolutions for printing images are as follows.

| Device                           | Landscape | Portrait |
|----------------------------------|-----------|----------|
| <b>T88III (Station: Receipt)</b> |           |          |
| Paper width: 58mm                | 180 dpi   | 180 dpi  |
| Paper width: 80mm                | 180 dpi   | 180 dpi  |

### 3.2.26 SetBitmap Method

#### Description

This method enables a jpeg file, gif file, and or Windows bmp file to be specified.

If a value other than PrinterBitmap.Left or 0 is specified for the *alignment* parameter, an exception is thrown when a device is incapable of printing in the specified location.

This method enables a jpeg file, gif file, and bmp file to be specified.

For the resolutions for printing images, refer to the **PrintBitmap** method.

This device can download images to volatile memory. One image can be downloaded to the device.

The upper size limits for images that can be downloaded to the device are shown below. The following values are the upper limits for the command specification. Paper width or other factors may result in an exception being thrown even when an upper limit is not reached.

| Station | Number of Dots Wide | Number of Dots High | Total ((Number of Dots Wide ÷ 8) × (Number of Dots High ÷ 8)) |
|---------|---------------------|---------------------|---|
| Receipt | 2040 dots           | 384 dots            | 1536 dots   |

### 3.2.27 SetLogo Method

#### Description

The following escape sequences cannot be specified in data saved using this method. If they are specified, an exception is thrown.

- ESC | tL
- ESC | bL



### 3.2.28 TransactionPrint Method

#### Description

If the current rotated print mode is rotated 90-degree print mode, the mode cannot be switched to transaction mode. When switching out of transaction mode, any buffering data saved to the ServiceObject in rotated 90-degree print mode is printed and rotated 90-degree print mode is maintained. If an exception is thrown when this method is called, the transaction mode is not switched. Furthermore, buffering data saved to the ServiceObject while in transaction mode is not cleared.

### 3.2.29 PageModePrint Method

#### Description

Since an exception is thrown with the following conditions, the methods below cannot be used.

| control                       | Methods                               | Mode          |
|-------------------------------|---------------------------------------|---------------|
| PageModePrintControl.PageMode | <b>CutPaper</b><br><b>RotatePrint</b> | PageModePrint |

With PageMode printing, the following escape sequences are ignored even if the device supports the function.

- ESC | P
- ESC | fP
- ESC | sP
- ESC | sL
- ESC | #rF
- ESC | #E

If the current rotation print mode is rotated 90-degree print mode or rotated 180-degree print mode, it is not possible to switch to PageMode printing.

If, while in the transaction printing mode, either of the **PageModePrint** methods, PageModePrintControl.Normal or PageModePrintControl.PrintSave are executed, the PageMode printing data is buffered into the transaction printing buffer.

Properties related PageMode is initialized with following values only when it calls with DeviceEnabled=true for the first time.

- PageModePrintArea(0,0,0,0)

The values saved in this property is set when the page mode is started by PageModePrint method. Also, It is not initialized even if page mode printing is terminated by the PageModePrint method.

When this method is invoked and an exception is thrown, the PageMode printing mode is not switched. In addition, with PageMode printing, data buffered in ServiceObject is not cleared.

### 3.3 Events

#### 3.3.1 DirectIOEvent

The properties listed below differ from functions described in UPOS.

- **PTR\_DIE\_RESPONSE Event Number**

#### Property

---

|                    |                                      |
|--------------------|--------------------------------------|
| <i>EventNumber</i> | PTR_DIE_RESPONSE                     |
| <i>Data</i>        | 0 (not used)                         |
| <i>Object</i>      | Stores the response from the printer |

#### Description

When the PTR\_DI\_OUTPUT\_NORMAL or PTR\_DI\_OUTPUT\_REALTIME command of the **DirectIO** method or the **PrintNormal** method/ **PrintImmediate** method involving ESC|#E results in the sending of an ESC/POS command that has a response from the device, the response is stored in the *Object* property and reported. The ESC/POS commands capable of notification as a response are as follows.

- ESC u
- ESC v
- GS I (printer ID of 1 byte)
- GS r
- DLE EOT
- GS ( C
- GS ( L
- GS 8 L
- GS ( G

- **PTR\_DIE\_SET\_BITMAP\_MODE Event Number**

**Property**


---

|                    |                         |
|--------------------|-------------------------|
| <i>EventNumber</i> | PTR_DIE_SET_BITMAP_MODE |
| <i>Data</i>        | Image saves method      |
| <i>Object</i>      | Stores the key code     |

**Description**

Notifies of the save method used when the **SetBitmap** method saved an image.

One of the following values is set to the *Data* property.

| <b>Data</b>    | <b>Meaning</b>                           |
|----------------|--|
| PTR_DIE_MEMORY | Stored in the ServiceObject              |
| PTR_DIE_VRAM   | Stored in volatile memory of the printer |

### 3.3.2 ErrorEvent

**Description**

If the **DeviceEnabled** property becomes false while there is an **ErrorEvent** event queued state, the ServiceObject assumes that the *ErrorResponse* property has been set to ErrorResponse.Retry and performs the corresponding processing. Therefore, asynchronous output data is output again when the **DeviceEnabled** property becomes true. To prevent this data from being output again, execute the **ClearOutput** method.

## Appendix-A Revision history

---

### A.1 EPSON OPOS ADK for .NET 1.14.6

- (1) Microsoft POS for .NET 1.14.1 is supported.

### A.2 EPSON OPOS ADK for .NET 1.12

- (1) Microsoft POS for .NET 1.12 is supported.
- (2) Added response type issued by DirectIOEvent.
- (3) Code page 997 is supported.

### A.3 EPSON OPOS ADK for .NET 1.11

- (1) Microsoft POS for .NET 1.11 is supported.
- (2) Changed Error codes for Hydra Devices.
- (3) Changed initialization sequence.

### A.4 EPSON OPOS ADK for .NET 1.9

- (1) Microsoft POS for .NET 1.1 is supported.

### A.5 EPSON OPOS ADK for .NET 1.8

POS Device driver complied with Microsoft POS for .NET 1.0 specification has been provided.

This version has been created based on EPSON OPOS ADK 2.40.

The following shows the difference between this version and EPSON OPOS ADK2.40.


#### Differences from EPSON OPOS ADK 2.40

- (1) All ErrorCode resulting in an exception being thrown and ErrorCodeExtended have been revised.
- (2) Commands that can be used with the **DirectIO** method were deleted or integrated. Therefore, some commands have been deleted or shifted to SetupPOS.
- (3) The **DeviceEnabled** property state was deleted from the issue conditions of queued events. Therefore, an event may be reported even if the **DeviceEnabled** property is in the false state.
- (4) The **SetBitmap** method dynamically saves an image to the most suitable location. The **DirectIOEvent** event notifies of the save location.

- (5) The print character count, print line count, line feed amount, and barcode print count of rotated 90-degree print mode and transaction print mode are reflected in the values that can be retrieved by the **RetrieveStatistics** method when printing is actually performed.
- (6) When the **Open** method is executed, a communication control class instance is generated. An exception is thrown if a communication control class instance is not generated when the **Open** method is executed.
- (7) If print data including a CR (carriage return) is specified for **ValidateData** method, an exception is thrown when the method is executed even if there is only a CR at the beginning of a line.
- (8) If the **StnLetterQuality** property is set to false, the image is sent with lower resolution. Therefore, if the **PrintBitmap** method and **SetBitmap** method are executed with this setting, the performance of the methods improves, but the image printing quality may fall.
- (9) Code page 255 is supported.
- (10) UPOS1.9 is supported.

## Appendix-B SetupPOS Settings

---

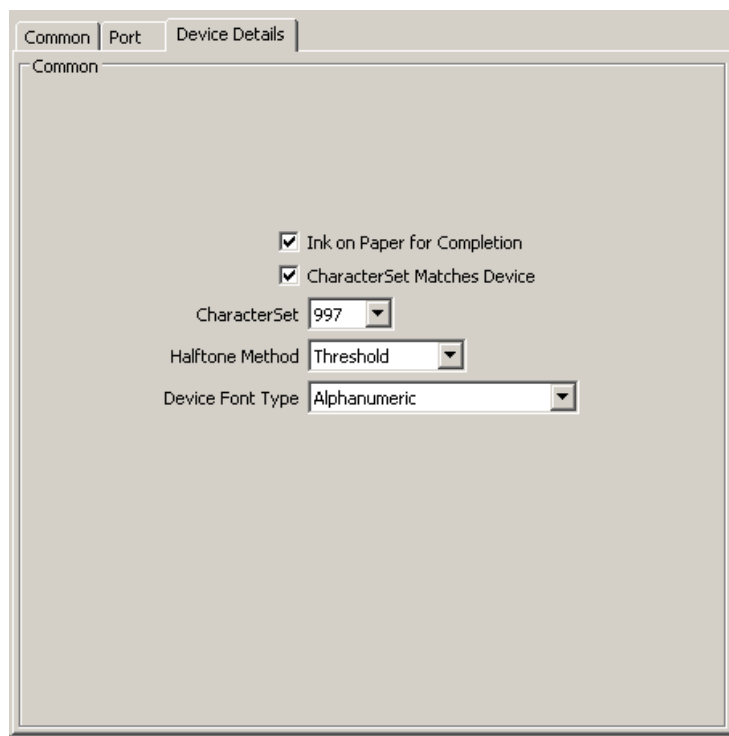

The above screen is the binding of TM-T88III.

### B.1 Verbose Error Codes Check Box

#### Description

Sets the error code type for during output.

| State              | Meaning   |
|--------------------|---|
| Checkmark added    | Sets the timeout to ErrorCodeExtended for an error that occurs during output.   |
| No checkmark added | Sets the printer state as is to ErrorCode or ErrorCodeExtended, regardless of whether the error occurred during output. |

**Default:** no checkmark added

For some devices, this setting is only possible when there is either a parallel or a network connection.

## B.2 CharacterSet Matches Device Check Box

### Description

Sets whether the setting for the international character set is changed automatically to match the value of the **CharacterSet** property.

| State              | Meaning   |
|--------------------|---|
| Checkmark added    | Sets the international character set to match the value of the <b>CharacterSet</b> property.                          |
| No checkmark added | Sets the international character set of America when the value of the <b>CharacterSet</b> property is other than 932. |

**Default:** checkmark added



## B.3 Ink on Paper for Completion Check Box

### Description

Sets whether to check that printing operation is complete.

| State              | Meaning   |
|--------------------|---|
| Checkmark added    | Judges the printing method to be complete when the device completes printing. |
| No checkmark added | Judges the printing method to be complete when data output is complete.       |

- **When set to judge method output to be complete when the device completes printing**

Printing on the device and the printing method are not completely synchronized. The method can be completed quickly.

If the value of the **AsyncMode** property is set to true, the completion of printing is reported before the device actually completes printing because the **OutputCompleteEvent** event considers the printing method to be complete when the data output is complete.

Printing is judged to be successful if method output completes even when an error was generated on the device during printing.

**Default:** checkmark added

## B.4 Halftone Method Combo Box

### Description

Sets the halftone method type used during image printing (execution of **PrintBitmap** method).

| Item            | Meaning   |
|-----------------|---|
| Threshold       | Uses the threshold method (monochrome conversion) on the specified image file, and then outputs it to the device. |
| Error Diffusion | Performs error diffusion processing on the specified image file, and then outputs it to the device.               |
| Dithering       | Performs dithering processing on the specified image file, and then outputs it to the device.                     |

**Default:** Threshold

## B.5 Device Font Type Combo Box

### Description

Sets the multi-byte character font of the device.

| Item       | Meaning                                      |
|------------|--|
| None (ANK) | The device has no multi-byte character font. |
| Japanese   | The device has a Japanese font.              |

- When set to the device has a Japanese font  
The **CharacterSet** property is set to 932.  
932 exists in the **CharacterSetList** property.  
Printing Japanese using the **PrintNormal** method and **PrintImmediate** method becomes possible if the **CharacterSet** property is 932.

**Default:** None (ANK)

## B.6 CharacterSet Combo Box

### Description

Set the initial value of the **CharacterSet** property. Select from a Character Set list depending on the setting of the **CharacterSetList** property. Selectable values change depending on the Device Font Type Combo Box setting.

| Item   | Meaning  |
|--|--|
| 997  | All the printable characters installed on device can be assigned to Unicode and printed. |
| 255,437,850,852,858,<br>860,863,865,866,999,<br>1252 | Printed with the standard code page.   |
| 932  | Only when DeviceFontType is set to "Japanese"  |

**Default:** 997

## Appendix-C HardWare Settings

### ● DIP Switch Settings

Set the DIP switches of this device as shown below.

#### 1) Serial connection

DIP-SW 1

| No. | Setting |
|-----|---------|
| 1   | ON      |
| 2   | ON      |
| 3   | ON      |
| 4   | ON      |
| 5   | ON      |
| 6   | ON      |
| 7   | ON      |
| 8   | OFF     |

Recommended

Fixed to OFF

Fixed to OFF

Fixed to OFF

Note 1

Note 1

Note 2

Note 2

DIP-SW 2

| No. | Setting |
|-----|---------|
| 1   | OFF     |
| 2   | OFF     |
| 3   | OFF     |
| 4   | OFF     |
| 5   | OFF     |
| 6   | OFF     |
| 7   | OFF     |
| 8   | OFF     |

Recommended

Fixed to OFF

Settable <sup>Note 3</sup>

Settable <sup>Note 3</sup>

Fixed to OFF

Fixed to OFF

Fixed to OFF

Fixed to OFF

Note 1: Set the parity with 5 and 6 of DIP-SW1.

DIP Switch 1 Parity Settings

| SW No. | Function         | ON          | OFF        | Default |
|--------|------------------|-------------|------------|---------|
| 1-5    | Parity check     | Parity      | No parity  | OFF     |
| 1-6    | Parity selection | Even parity | Odd parity | OFF     |

Note 2: Set the transmission speed with 7 and 8 of DIP-SW1.

DIP Switch 1 Transmission Speed Switching

| SW1-7 | SW1-8 | Baud Rate (bps) |
|-------|-------|-----------------|
| ON    | ON    | 38400           |
| OFF   | ON    | 4800            |
| ON    | OFF   | 9600            |
| OFF   | OFF   | 19200           |

Note 3: Set the printing density with 3 and 4 of DIP-SW2.

**2) Parallel connection**

DIP-SW 1

| No. | Setting |              |
|-----|---------|--------------|
| 1   | OFF     | Recommended  |
| 2   | OFF     | Fixed to OFF |
| 3   | ON      | Recommended  |
| 4   | OFF     | Fixed to OFF |
| 5   | OFF     | Fixed to OFF |
| 6   | OFF     | Fixed to OFF |
| 7   | OFF     | Fixed to OFF |
| 8   | OFF     | Fixed to OFF |

DIP-SW 2

| No. | Setting |                            |
|-----|---------|----------------------------|
| 1   | ON      | Fixed to ON                |
| 2   | OFF     | Fixed to OFF               |
| 3   | OFF     | Settable <sup>Note 1</sup> |
| 4   | OFF     | Settable <sup>Note 1</sup> |
| 5   | OFF     | Fixed to OFF               |
| 6   | OFF     | Fixed to OFF               |
| 7   | OFF     | Fixed to OFF               |
| 8   | ON      | Fixed to ON                |

Note 1: Set the printing density with 3 and 4 of DIP-SW2.

**3) USB connection Supported and Network connection**

DIP-SW 1

| No. | Setting |              |
|-----|---------|--------------|
| 1   | OFF     | Fixed to OFF |
| 2   | OFF     | Fixed to OFF |
| 3   | OFF     | Fixed to OFF |
| 4   | OFF     | Fixed to OFF |
| 5   | OFF     | Fixed to OFF |
| 6   | OFF     | Fixed to OFF |
| 7   | OFF     | Fixed to OFF |
| 8   | OFF     | Fixed to OFF |

DIP-SW 2

| No. | Setting |                            |
|-----|---------|----------------------------|
| 1   | OFF     | Recommended                |
| 2   | OFF     | Fixed to OFF               |
| 3   | OFF     | Settable <sup>Note 1</sup> |
| 4   | OFF     | Settable <sup>Note 1</sup> |
| 5   | OFF     | Fixed to OFF               |
| 6   | OFF     | Fixed to OFF               |
| 7   | OFF     | Fixed to OFF               |
| 8   | ON      | Fixed to ON                |

Note 1: Set the printing density with 3 and 4 of DIP-SW2.

- Memory Switch Settings**

This device has no memory switch.

## Appendix-D Default Values of Properties

### ● Common Settings

| Property                   | Setting Value/Default Value   | Range of Settings   |
|----------------------------|---|---|
| CapCompareFirmwareVersion  | false   | —   |
| CapPowerReporting          | (Serial connection)<br>PowerReporting.Standard<br>(Other connection)<br>PowerReporting.Advanced | —   |
| CapStatisticsReporting     | true  | —   |
| CapUpdateFirmware          | false   | —   |
| CapUpdateStatistics        | true  | —   |
| CheckHealthText            | ""  | —   |
| Claimed                    | false   | —   |
| DeviceEnabled              | false   | true, false   |
| OutputID                   | 0   | —   |
| PowerNotify                | PowerNotification.Disabled  | PowerNotification.Disabled,<br>PowerNotification.Enabled        |
| PowerState                 | PowerState.Unknown  | —   |
| DeviceDescription          | Refer to "Device Specific Property Settings".   | —   |
| DeviceName                 | Refer to "Device Specific Property Settings".   | —   |
| State                      | ControlState.Idle   | —   |
| AsyncMode                  | false   | true, false   |
| CapCharacterSet            | Refer to "Settings Affecting Changing of Language".   | Refer to "Settings Affecting Changing of Language".             |
| CapConcurrentJrnRec        | false   | —   |
| CapConcurrentJrnSlp        | false   | —   |
| CapConcurrentRecSlp        | false   | —   |
| CapConcurrentPageMode      | false   | —   |
| CapCoverSensor             | true  | —   |
| CapMapCharacterSet         | false   | —   |
| CapTransaction             | true  | —   |
| CartridgeNotify            | PrinterCartridgeNotify.Disabled   | —   |
| CharacterSet               | Refer to "Settings Affecting Changing of Language".   | Refer to "Settings Affecting Changing of Language".             |
| CharacterSetList           | Refer to "Settings Affecting Changing of Language".   | Refer to "Settings Affecting Changing of Language".             |
| ErrorLevel                 | PrinterErrorLevel.None  | —   |
| ErrorStation               | PrinterStation.None   | —   |
| ErrorString                | ""  | —   |
| FlagWhenIdle               | false   | true, false   |
| FontTypefaceList           | ""  | —   |
| MapCharacterSet            | false   | —   |
| MapMode                    | MapMode.Dots  | MapMode.Dots, MapMode.Twips,<br>MapMode.English, MapMode.Metric |
| PageModeArea               | Refer to "Settings Related to PageMode".  | —   |
| PageModeDescriptor         | Refer to "Settings Related to PageMode".  | —   |
| PageModeHorizontalPosition | Refer to "Settings Related to PageMode".  | Refer to "Settings Related to PageMode".                        |
| PageModePrintArea          | Refer to "Settings Related to PageMode".  | Refer to "Settings Related to PageMode".                        |
| PageModePrintDirection     | Refer to "Settings Related to PageMode".  | Refer to "Settings Related to PageMode".                        |

|                          |  |  |
|--------------------------|--|--|
| PageModeStation          | PrinterStation.None                      | PrinterStation.Receipt   |
| PageModeVerticalPosition | Refer to "Settings Related to PageMode". | Refer to "Settings Related to PageMode".   |
| RotateSpecial            | PrintRotation.Normal                     | PrintRotation.Normal, PrintRotation.Right90, PrintRotation.Left90, PrintRotation.Rotate180 |
| CoverOpen                | false                                    | —  |

### ● Settings Related to Receipts

| Property               | Setting Value/Default Value   | Range of Settings  |
|------------------------|---|--|
| CapRec2Color           | Refer to "Settings Affecting Changing of Print Colors".   | —  |
| CapRecBarCode          | true  | —  |
| CapRecBitmap           | true  | —  |
| CapRecBold             | true  | —  |
| CapRecCartridgeSensor  | PrinterCartridgeSensors.None  | —  |
| CapRecColor            | Refer to "Settings Affecting Changing of Print Colors".   | —  |
| CapRecDhigh            | true  | —  |
| CapRecDwide            | true  | —  |
| CapRecDwideDhigh       | true  | —  |
| CapRecEmptySensor      | true  | —  |
| CapRecItalic           | false   | —  |
| CapRecLeft90           | true  | —  |
| CapRecMarkFeed         | PrinterMarkFeeds.None   | —  |
| CapRecNearEndSensor    | true  | —  |
| CapRecPageMode         | true  | —  |
| CapRecPapercut         | true  | —  |
| CapRecPresent          | true  | —  |
| CapRecRight90          | true  | —  |
| CapRecRotate180        | true  | —  |
| CapRecStamp            | false   | —  |
| CapRecUnderline        | true  | —  |
| RecBarCodeRotationList | PrintRotation.Normal, PrintRotation.Right90, PrintRotation.Left90, PrintRotation.Rotate180  | —  |
| RecBitmapRotationList  | PrintRotation.Normal, PrintRotation.Right90, PrintRotation.Left90, PrintRotation.Rotate180  | —  |
| RecCurrentCartridge    | PrinterColors.Primary   | —  |
| RecCartridgeState      | PrinterCartridgeStates.Unknown  | —  |
| RecEmpty               | false   | —  |
| RecLetterQuality       | false   | true, false  |
| RecLineChars           | Refer to "Settings Affecting Changing of Paper Width".  | Refer to "Settings Affecting Changing of Paper Width".                           |
| RecLineCharsList       | Refer to "Settings Affecting Changing of Paper Width".  | —  |
| RecLineHeight          | 24  | The font height is adjusted to that of FontA or FontB specified in RecLineChars. |
| RecLineSpacing         | 30  | 1 to 255   |
| RecLinesToPaperCut     | 5<br>Changing RecLineSpacing configures the setting as follows.<br>$\text{RecLinesToPaperCut} = 145 \div \text{RecLineSpacing}$<br>(If the above calculation generates a remainder, perform the following calculation:<br>$\text{RecLinesToPaperCut} = \text{RecLinesToPaperCut} + 1$ ) | —  |
| RecLineWidth           | Refer to "Settings Affecting Changing of Paper Width".  | Refer to "Settings Affecting Changing of Paper Width".                           |
| RecNearEnd             | false   | —  |
| RecSidewaysMaxChars    | Refer to "Settings Affecting Changing of Print Colors".   | —  |
| RecSidewaysMaxLines    | Refer to "Settings Affecting Changing of Paper Width".  | —  |

- **Device Specific Property Settings**

| Device    | Property          | Setting Value/Default Value | Range of Settings |
|-----------|-------------------|-----------------------------|-------------------|
| TM-T88III | DeviceDescription | "EPSON TM-T88III Printer"   | —                 |
|           | DeviceName        | "TM-T88III"                 | —                 |

- **Settings Affecting Changing of Language**

**TM-T88III**

| Language | Property         | Setting Value/Default Value                          | Range of Settings                     |
|----------|------------------|--|---------------------------------------|
| ANK      | CapCharacterSet  | CharacterSetCapability.Unicode                       | —                                     |
|          | CharacterSet     | CharacterSetUnicode                                  | One of the values in CharacterSetList |
|          | CharacterSetList | 255,437,850,852,858,860,863,865,866,997,999,1252     | —                                     |
| Japanese | CapCharacterSet  | CharacterSetCapability.Unicode                       | —                                     |
|          | CharacterSet     | CharacterSetUnicode                                  | One of the values in CharacterSetList |
|          | CharacterSetList | 255,437,850,852,858,860,863,865,866,932,997,999,1252 | —                                     |

- **Settings Affecting Changing of Print Colors**

**TM-T88III**

| Color     | Property            | Setting Value/Default Value | Range of Settings |
|-----------|---------------------|-----------------------------|-------------------|
| One color | CapRec2Color        | false                       | —                 |
|           | CapRecColor         | PrinterColors.Primary       | —                 |
|           | RecSidewaysMaxChars | 69(FontA)<br>92(FontB)      | —                 |



● Settings Affecting Changing of Paper Width

TM-T88III

| Paper Width | Property            | Setting Value/Default Value  | Range of Settings  |
|-------------|---------------------|--|--|
| 58 mm       | RecLineChars        | 30   | 1 to 40<br>Numbers described in RecLineCharsList can be set. For any other value, if the set value is smaller than the maximum value supported by the printer, the value is set to the nearest value that is larger than the specified value in RecLineCharsList properties. |
|             | RecLineCharsList    | "30,40"  | —  |
|             | RecLineWidth        | 360  | —  |
|             | RecSidewaysMaxLines | The value resulting from the following calculation is set (after rounding it down to the nearest whole number).<br>$((\text{Value of RecLineWidth} - 21 \text{ dots}) \div (\text{the largest value of RecLineSpacing and RecLineHeight})) + 1.$ | —  |
| 80 mm       | RecLineChars        | 42   | 1 to 56<br>Numbers described in RecLineCharsList can be set. For any other value, if the set value is smaller than the maximum value supported by the printer, the value is set to the nearest value that is larger than the specified value in RecLineCharsList properties. |
|             | RecLineCharsList    | "42,56"  | —  |
|             | RecLineWidth        | 512  | —  |
|             | RecSidewaysMaxLines | The value resulting from the following calculation is set (after rounding it down to the nearest whole number).<br>$((\text{Value of RecLineWidth} - 21 \text{ dots}) \div (\text{the largest value of RecLineSpacing and RecLineHeight})) + 1.$ | —  |

● Settings Related to PageMode

TM-T88III

| Language  | Property                   | Setting Value/Default Value   | Range of Settings   |
|-----------|----------------------------|---|---|
| ANK<br>JP | PageModeArea               | (Paper width: 58.0mm)<br>"360,831"<br>(Paper width: 80.0mm)<br>"512,831"  | —   |
|           | PageModeDescriptor         | PageModeDescriptors.Barcode,<br>PageModeDescriptors.Bitmap,<br>PageModeDescriptors.BitmapRotate,<br>PageModeDescriptors.BarcodeRotate | —   |
|           | PageModeHorizontalPosition | 0   | 0 or more   |
|           | PageModePrintArea          | "0,0,0,0"   | "X, Y, Width, Height"<br>(Paper width: 58.0mm)<br>$X + \text{Width} \leq 360$<br>$Y + \text{Height} \leq 831$<br>(Paper width: 80.0mm)<br>$X + \text{Width} \leq 512$<br>$Y + \text{Height} \leq 831$ |
|           | PageModePrintDirection     | PageModePrintDirection.None   | PageModePrintDirection.BottomToTop,<br>PageModePrintDirection.LeftToRight,<br>PageModePrintDirection.RightToLeft,<br>PageModePrintDirection.TopToBottom   |
|           | PageModeVerticalPosition   | 0   | 0 or more   |

## Appendix-E Escape Sequences

The following figure is about supported/unsupported Escape Sequences.

| Device    | Escape Sequence | Range of Settings |
|-----------|-----------------|-------------------|
| TM-T88III | ESC #P          | 0 to 100 (100)    |
|           | ESC #P          | 0 to 100 (100)    |
|           | ESC #sP         | —                 |
|           | ESC sL          | —                 |
|           | ESC #B          | 1 to 20           |
|           | ESC tL          | 0                 |
|           | ESC bL          | 0                 |
|           | ESC #F          | 0 to 9999 (1)     |
|           | ESC #uF         | 0 to 9999 (1)     |
|           | ESC #rF         | —                 |
|           | ESC #E          | 0 to 999 (1)      |
|           | ESC #T          | —                 |
|           | ESC bC          | 0                 |
|           | ESC #uC         | 0 to 2 (1)        |
|           | ESC iC          | —                 |
|           | ESC #C          | 1                 |
|           | ESC rvC         | 0                 |
|           | ESC #sC         | —                 |
|           | ESC 1C          | 0                 |
|           | ESC 2C          | 0                 |
|           | ESC 3C          | 0                 |
|           | ESC 4C          | 0                 |
|           | ESC #hC         | 1 to 8 (1)        |
|           | ESC #vC         | 1 to 8 (1)        |
|           | ESC tbC         | —                 |
|           | ESC tpC         | —                 |
|           | ESC cA          | 0                 |
|           | ESC rA          | 0                 |
|           | ESC lA          | 0                 |
|           | ESC N           | 0                 |
|           | ESC #R          | 1 to 999999999    |
|           | ESC #stC        | 0 to 1 (1)        |

The number in ( ) is the value when # is omitted.  
0 indicates the setting is possible.

## Appendix-F DeviceStatistics

### TM-T88III

| XML Definition Name          | Description                    | Reset Permission | Update Permission |
|------------------------------|--------------------------------|------------------|-------------------|
| UnifiedPOSVersion            | UPOS version                   | x                | x                 |
| DeviceCategory               | Device category                | x                | x                 |
| ManufactureName              | Manufacturer name              | x                | x                 |
| ModelName                    | Device name                    | x                | x                 |
| SerialNumber                 | Serial number                  | x                | x                 |
| ManufactureDate              | Manufacture date               | x                | x                 |
| MechanicalRevision           | Device revision                | x                | x                 |
| FirmwareRevision             | Firmware version               | x                | x                 |
| Interface                    | Interface                      | x                | x                 |
| InstallationDate             | Installation date              | x                | x                 |
| HoursPoweredCount            | Operation time                 | O                | O                 |
| CommunicationErrorCount      | Communication error count      | O                | O                 |
| BarcodePrintedCount          | Barcode print count            | O                | O                 |
| FormInsertionCount           | Slip insertion count           | x                | x                 |
| HomeErrorCount               | Mechanical error count         | O                | O                 |
| JournalCharacterPrintedCount | Journal character print count  | x                | x                 |
| JournalLinePrintedCount      | Journal line print count       | x                | x                 |
| MaximumTempReachedCount      | Head temperature error count   | O                | O                 |
| NVRAMWriteCount              | NVRAM setting count            | x                | x                 |
| PaperCutCount                | Paper cut count                | O                | O                 |
| FailedPaperCutCount          | Paper cut failure count        | O                | O                 |
| PrinterFaultCount            | Unrecoverable error count      | O                | O                 |
| PrintSideChangeCount         | Slip side change count         | x                | x                 |
| FailedPrintSideChangeCount   | Slip side change failure count | x                | x                 |
| ReceiptCharacterPrintedCount | Receipt print character count  | O                | O                 |
| ReceiptLinePrintedCount      | Receipt print line count       | O                | O                 |
| ReceiptLineFeedCount         | Receipt line feed count        | O                | O                 |
| ReceiptCoverOpenCount        | Receipt cover open count       | O                | O                 |
| SlipCharacterPrintedCount    | Slip print character count     | x                | x                 |
| SlipLinePrintedCount         | Slip print line count          | x                | x                 |
| SlipLineFeedCount            | Slip line feed count           | x                | x                 |
| SlipCoverOpenCount           | Slip cover open count          | x                | x                 |
| StampFiredCount              | Stamp print count              | x                | x                 |

O: Permitted  
x: Not permitted