

**EPSON OPOS ADK for .NET Manual**

# **Application Development Guide**

## **MICR (TM-U950)**

Version 1.11 Nov. 2007

## **Notes**

- (1) Reproduction of any part of this documentation by any means is prohibited.
- (2) The contents of this documentation are subject to change without notice.
- (3) Comments and notification of any mistakes in this documentation are gratefully accepted.
- (4) This software cannot be used with other equipment than the specified.
- (5) EPSON will not be responsible for any consequences resulting from the use of any information in this documentation.

## **Trademarks**

Microsoft®, Windows®, Windows Server® and Windows Vista® are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. IBM® and PC/AT® are trademarks or registered trademarks of International Business Machines Corporation in the United States, other countries, or both. Epson® and ESC/POS® are registered trademarks of Seiko Epson Corporation. Other product and company names used herein are for identification purposes only and may be trademarks or registered trademarks of their respective companies. Epson disclaims any and all rights in those marks.

Copyright (C) 2005-2007 Seiko Epson Corporation

# Contents

---



---

<b>Chapter 1 Introduction</b>	<b>1</b>
1.1 Terminology.....	1
<b>Chapter 2 Before Using MICR</b>	<b>2</b>
2.1 Device Setting .....	2
2.2 Notes and Restrictions.....	2
<b>Chapter 3 Properties, Methods, and Events</b>	<b>3</b>
3.1 Properties .....	3
3.2 Method.....	5
3.3 Events.....	13
<b>Appendix A Revision history</b>	<b>14</b>
A.1 EPSON OPOS ADK for .NET 1.11 .....	14
A.2 EPSON OPOS ADK for .NET 1.9 .....	14
A.3 EPSON OPOS ADK for .NET 1.8 .....	14
<b>Appendix B SetupPOS Settings</b>	<b>15</b>
B.1 “Verify Check Digit” check box .....	15
B.2 “MICR Character Type” combo box.....	16
B.3 “Slip Clamp Time (ms)” text box .....	16
<b>Appendix C Hardware Settings</b>	<b>17</b>
C.1 DIP switch settings .....	17
C.2 Memory switch settings.....	17
<b>Appendix D Default Values of Properties</b>	<b>18</b>
<b>Appendix E DeviceStatistics</b>	<b>19</b>

# Chapter 1 Introduction

---

This section explains how to use MICR when using EPSON OPOS ADK for .NET, including any related information and special notes regarding the device.

For details on the POS for .NET API, refer to the "UnifiedPOS Retail Peripheral Architecture Version 1.11" specification and the MSDN "POS for .NET v1.11 SDK Documentation": Refer to the release notes for information on where to find the latest information.

## 1.1 Terminology

- "UnifiedPOS Retail Peripheral Architecture Version 1.11" may be abbreviated as "UPOS".
- "Microsoft POS for .NET" may be abbreviated as "POS.NET".
- "EPSON OPOS ADK for .NET Version 1.11" may be abbreviated as "OPOS.NET".
- "MICR" may be abbreviated as "the device".
- "The ServiceObject of MICR provided by OPOS.NET" may be abbreviated as "ServiceObject".
- "ErrorCode property of PosControlException" may be abbreviated as "ErrorCode".
- "ErrorCodeExtended property of PosControlException" may be abbreviated as "ErrorCodeExtended".
- "Exception" indicates "PosControlException".
- The EPSON original device constant used with this device is defined in "jp.co.epson.uposcommon.EpsonUPOSConst" and "jp.co.epson.uposcommon.EpsonMICRConst".
- When used at the same time as POSPrinter, cut paper may be inserted. In this case, read "check" in this manual as "cut paper" as necessary.
- Wired LANs and wireless LANs may be referred to as networks.

## Chapter 2 Before Using MICR

---

This chapter explains how to set up MICR, as well as notes and restrictions on using it.

### 2.1 Device Setting

After checking the hardware model number and the hardware settings, select the correct device using the SetupPOS utility. Refer to “[Appendix C Hardware Settings](#)” information on setting the hardware. Refer to “[Appendix B SetupPOS Settings](#)” information on how to use the SetupPOS utility.

### 2.2 Notes and Restrictions

- While the **EndInsertion** method is executed, there may be notification from **DataEvent** and **ErrorEvent**.
- With the **EndInsertion** method, image data scanning is performed. During this time, output is not possible to devices connected to the printer other than MICR (Example: The LineDisplay marquee stops).
- In the **EndInsertion** method, the setting of printing position is carried out after reading the check.
- ServiceObject does not carry out data analysis for CMC7 check.
- When rebooting the device, wait for at least 5 second after turning OFF the power before powering up again.
- If the device power is rebooted, execute the **Release** method once.
- When the check is inserted in the device, if the cover is opened and closed, the check is not ejected.

## Chapter 3 Properties, Methods, and Events

---

### 3.1 Properties

The properties that differ from functions described in UPOS are shown below.

#### 3.1.1 CapPowerReporting property

##### Description

The notification capability of the connected device is identified.

This property is set to one of the following values.

Value	Meaning
PowerReporting.Standard	The value set when there is a serial connection.  ServiceObject can determine between and provide notification of the two power statuses: OFF_OFFLINE (the device is turned off or offline) and ONLINE.

#### 3.1.2 CountryCode property

##### Description

It is set with data showing the issuing country of the check that had just been read out by MICR.

In this ServiceObject, only the following values are set:

Value	Meaning
CheckCountryCode.Unknown	The country name is unknown.

### 3.1.3 DeviceEnabled property

#### Description

When the **DeviceEnabled** property is set to TRUE first after the **Claim** method is executed, device initialization is performed.

In the following states, device initialization cannot be done:

- Offline (e.g. Cover open, out of paper, etc.)
- Error (e.g. Paper jam)

When the **DeviceEnabled** property is set to TRUE, the printer state is notified via a **StatusUpdateEvent**.

If the **StatusUpdateEvent** for the printer stat is not defined in UPOS, however, the **StatusUpdateEvent** cannot be notified. In this case, the printer status can be found by examining the exception that is notified when the method is executed.

If the device initialization cannot be done when the **DeviceEnabled** property is set to TRUE, a device status is checked at an interval of 1 second, and it is repeated until the device initialization is performed completely.

The device initialization status can be found by enabling the **PowerNotify** property.

When StatusPowerOnline is notified by a **StatusUpdateEvent**, the initialization process is complete.

In addition, the initialization process may take several seconds depending on the connection speed and the image registration status.

## 3.2 Method

The methods that differ from functions described in UPOS are shown below.

### 3.2.1 Claim method


#### Description

The device connection state is confirmed. If the device is not connected, or if the power is OFF, an exception is thrown. In the case of a Serial connection, the device connection state cannot be confirmed. In this case, Success is always returned.

### 3.2.2 CheckHealth method

#### Description

This ServiceObject supports only "HealthCheckLevel.Interactive".  
When "HealthCheckLevel.Interactive" is executed, the following dialog box appears.

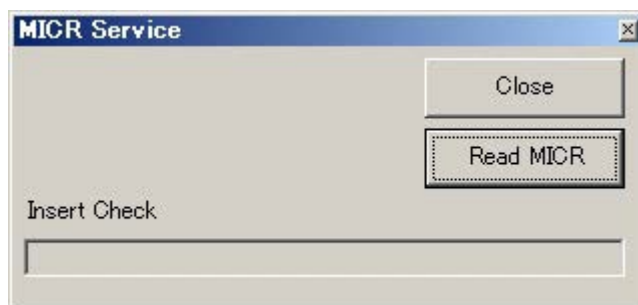

When buttons are clicked, the operations are as follows:

- **"Read MICR" button**

Clicking Read MICR enables CheckHealth to enter the check insertion waiting mode. When a check is inserted, it is scanned and ejected, and the **RawData** property is displayed to "InsertCheck". If a scanning error occurs, a message indicating the type of error is displayed.



- **“Close” button**

Clicking Close ends **CheckHealth** method.

The results are saved in the **CheckHealthText** property.

And besides, the following value is retrieved as the returned value of method.

<b>Value</b>	<b>Meaning</b>
Interactive HCheck : Canceled	Ended CheckHealth without scanning a single check.
Interactive HCheck : Complete	Ended CheckHealth after scanning the last check ended normally.
Interactive HCheck : Error - <i>&lt;Message&gt;</i>	Ended CheckHealth after scanning the last check ended with an error. The content of the error appears as a <i>Message</i> .

### 3.2.3 DirectIO method

#### Description

**DirectIO** method can be used when the **DeviceEnabled** property is "true".

The functions that the **DirectIO** method supports are as follows.

Command	Outline of function
MICR_DI_CLEANING	Cleaning of MICR is executed.

- **MICR\_DI\_CLEANING command**

Parameter	
<i>command</i>	MICR_DI_CLEANING
<i>data</i>	Unused
<i>object</i> (byte[] type)	Unused

#### Description

It cleans the MICR device.

When this command is executed, the cleaning sheet is taken up from the check insertion slot and cleaning process is carried out. After this, the sheet is ejected.

### 3.2.4 ResetStatistics Method

- **Parameter type:** *Microsoft.PointOfService.StatisticCategories*

#### Parameter

---

*Microsoft.PointOfService.StatisticCategories*

Specify one of the following.

- *StatisticCategories.Upas*
- *StatisticCategories.Manufacturer*
- *StatisticCategories.All*

#### Description

Of the items included in the specified category, only the items for which O appeared for the permission reset in "Appendix-E DeviceStatistics" are reset.

All the statistics supported by the ServiceObject are defined in UPOS. If "StatisticCategories.Manufacturer" is specified, nothing is reset.

- **Parameter type:** *String[]*

#### Parameter

---

*String[]*

An array of the item names to reset

#### Description

Of the items included in the specified category, only the items for which O appears for the reset permission in "Appendix-E DeviceStatistics" are reset when "U\_", "M\_", or an empty string is specified for item names.

If an illegal item name or non-resettable item name is included, this method reports an error. When this happens, correctly specified items are also not reset.

All the statistics supported by the ServiceObject are defined in UPOS. If "M\_" is specified, nothing is reset.

### 3.2.5 ResetStatistic Method

#### Description

Of the items included in the specified category, only the items for which O appears for the reset permission in "Appendix-E DeviceStatistics" are reset when "U\_", "M\_", or an empty string is specified for item names.

If an illegal item name or non-resettable item name is specified, this method reports an error.

All the statistics supported by the ServiceObject are defined in UPOS. If "M\_" is specified, nothing is reset.

### 3.2.6 RetrieveStatistics Method

- **Parameter type:** *Microsoft.PointOfService.StatisticCategories*

#### Parameter

---

*Microsoft.PointOfService.StatisticCategories*

Specify one of the following.

- *StatisticCategories.Upos*
- *StatisticCategories.Manufacturer*
- *StatisticCategories.All*

#### Description

The Statistics supported by ServiceObject are all defined in UPOS. If “StatisticCategories.Manufacturer” is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

- **Parameter type:** *String[]*

#### Parameter

---

*String[]*

An array of the item names to retrieve

#### Description

If an illegal item name is included, this method reports an error.

The Statistics supported by ServiceObject are all defined in UPOS. If “M\_” is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

- **Parameter type:** *None*

#### Description

The information of all defined items is retrieved.

### 3.2.7 RetrieveStatistic Method

#### Description

If an illegal item name is included, this method reports an error.

If multiple item names separated by commas are specified (UPOS Specification), an error is reported.

The Statistics supported by ServiceObject are all defined in UPOS. If “M\_” is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

### 3.2.8 UpdateStatistics Method

- Parameter type: *Microsoft.PointOfService.Statistic[]*

#### Parameter

---

*Microsoft.PointOfService.Statistic[]* Specifies  
*Microsoft.PointOfService.Statistic*  
 array for which item names and  
 new values have been set.

#### Description

Of the items included in the specified category, only the items for which O appears for the update permission in "[Appendix-E DeviceStatistics](#)" are updated when "U\_", "M\_", or an empty string is specified for item names. If an illegal item name or non-updatable item name is included, this method reports an error. In this case, correctly specified items are also not updated.

The Statistics supported by ServiceObject are all defined by UPOS. If "M\_" is specified, nothing is updated.

- Parameter type: *Microsoft.PointOfService.StatisticCategories*

#### Parameter

---

*Microsoft.PointOfService.StatisticCategories*  
 Specify one of the following.

- StatisticCategories.Upos
- StatisticCategories.Manufacturer
- StatisticCategories.All

*Object* Specify the new value after updating.

#### Description

Of the items included in the specified category, only the items for which O appeared for the update permission in "[Appendix-E DeviceStatistics](#)" are updated.

All the statistics supported by the ServiceObject are defined in UPOS. If "StatisticCategories.Manufacturer" is specified, nothing is update.

### 3.2.9 UpdateStatistic Method

#### Description

Of the items included in the specified category, only the items for which O appears for the update permission in "[Appendix-E DeviceStatistics](#)" are updated when "U\_", "M\_", or an empty string is specified for item names. If an illegal item name or non-updatable item name is specified, this method reports an error.

The Statistics supported by ServiceObject are all defined by UPOS. If "M\_" is specified, nothing is updated.

### 3.2.10 BeginInsertion method

#### Description

The **BeginInsertion** method determines whether a check is placed on the clamp.

The device supported by the ServiceObject cannot open the clamp or change to the check insertion mode.

### 3.2.11 EndInsertion method

#### Description

If check is placed in the insertion slot of device, the check is taken up and analysis carried out.

If there is no check, an exception is thrown.

### 3.2.12 BeginRemoval method

#### Description

When this method is executed, the check is ejected.

The device waits until the check is removed from the device completely.

If the check is not ejected completely from the device when the time of the *timeout* parameter has elapsed, an exception with the "ErrorCode.Timeout" ErrorCode is thrown.

### 3.2.13 EndRemoval method

#### Description

When this method is executed, the device checks whether or not there is a check in the ejection slot.

If there is a check in the insertion slot or ejection slot of the printer, an exception is thrown.

### 3.2.14 ClearInputProperties method

#### Description

The following properties are cleared by this method:

Property Name	Cleared Value
AccountNumber Property	"" (empty character string)
Amount Property	"" (empty character string)
BankNumber Property	"" (empty character string)
CheckType Property	99 ("Unknown type")
CountryCode Property	99 ("Unknown code")
EPC Property	"" (empty character string)
RawData Property	"" (empty character string)
SerialNumber Property	"" (empty character string)
TransitNumber Property	"" (empty character string)

### 3.3 Events

#### 3.3.1 ErrorEvent event

##### Description

In this ServiceObject, each property related to MICR data is updated immediately prior to the ErrorLocus value issuing the ErrorEvent set in "ErrorLocus.Input".

The properties that are updated and the updated value obtained are as follows:

Property Name	Value
AccountNumber	"" (empty character string)
Amount	"" (empty character string)
BankNumber	"" (empty character string)
EPC	"" (empty character string)
RawData	MICR data that was read or "" (empty character string)
SerialNumber	"" (empty character string)
TransitNumber	"" (empty character string)
CheckType	CheckType.Unknown
CountryCode	CheckCountryCode.Unknown



## Appendix A Revision history

---

### A.1 EPSON OPOS ADK for .NET 1.11

- (1) Microsoft POS for .NET 1.11 is supported.
- (2) Changed Error codes for Hydra Devices.
- (3) Changed initialization sequence.

### A.2 EPSON OPOS ADK for .NET 1.9

- (1) Microsoft POS for .NET 1.1 is supported.

### A.3 EPSON OPOS ADK for .NET 1.8

POS Device driver complied with Microsoft POS for .NET 1.0 specification has been provided.

This version has been created based on EPSON OPOS ADK 2.40.

The following shows the difference between this version and EPSON OPOS ADK 2.40.

#### Differences from EPSON OPOS ADK 2.40

- (1) The **ErrorCode** and **ErrorCodeExtended** for exceptions have all been reviewed.
- (2) **DeviceEnabled** property status has been deleted from the issuing conditions of queued events. As a result, even when the status of the **DeviceEnabled** property is "false", there may be notification of events.
- (3) The **Open** method has been changed so that when it is executed, a communication control class instance is generated. If a communication control class instance is not generated, when the **Open** method is executed, an exception is thrown.
- (4) The judgment of error during the execution of **EndInsertion** has been reviewed, and handling has been changed to give priority to the results of reading from device. As a result, even if device is in error state (such as cover is open) during reading, there may be cases where data can be read correctly.
- (5) If **State** property is **ControlState.Error**, **BeginInsertion** method and **EndInsertion** method cannot be executed.
- (6) The issuance method of events when read error occurs has been changed. Property is changed if ErrorLocus issues **ErrorEvent** set in "ErrorLocus.Input".
- (7) UPOS1.9 is supported.

## Appendix B SetupPOS Settings

---

The screenshot shows a window titled 'Common Port Device Details'. The 'Device Details' tab is selected. Inside the window, there is a 'Common' sub-tab. Under this sub-tab, there is a checked checkbox labeled 'Verify Check Digit'. Below this, there is a label 'MICR Character Type' followed by a dropdown menu showing 'E13B'. At the bottom, there is a label 'Slip Clamp Time (ms)' followed by a text box containing the value '0'.

### B.1 “Verify Check Digit” check box

#### Description

Sets for availability of CheckDigit verification function.

Condition	Meaning
Checked	CheckDigit is verified
Not checked	CheckDigit is not verified

- **If verification of CheckDigit is set**

If error is judged in the verification of CheckDigit, notification is made as an ErrorEvent.

**Default:** checked

## B.2 “MICR Character Type” combo box

### Description

Sets the data format of the check to be read.

Item	Meaning
E13B	The check is in E13B format
CMC7	The check is in CMC7 format

If set to “CMC7”, the data read from the check is not analyzed.

**Default:** E13B

## B.3 “Slip Clamp Time (ms)” text box

### Description

Set the time from insertion of single sheet (execution of the **EndInsertion** method) until clamping.

Setting Value	Meaning
0 to 6400	Waiting time until clamping (unit: ms) Setting can be done in units of 100 ms

**Default:** 0 (ms)

## Appendix C Hardware Settings

### C.1 DIP switch settings

Set the DIP switches of this device as follows:

#### 1) Serial interface

DIP-SW1

No.	Setting
1	OFF
2	OFF
3	OFF
4	OFF
5	OFF
6	OFF
7	OFF
8	OFF

Fixed to OFF

Note 1

Note 1

Note 2

Note 2

Note 3

Recommended

Recommended

DIP-SW2

No.	Setting
1	OFF
2	OFF
3	OFF
4	OFF
5	ON
6	ON
7	OFF
8	OFF

Recommended

Fixed to OFF

Fixed to OFF

Settable

Settable

Fixed to ON

Note 4

Note 4

Note 1 Numbers 2 and 3 of DIP-SW1 set the parity.

DIP Switch 1 Parity Settings

SW No.	Function	ON	OFF	Default
1-2	Parity check	Parity	No parity	OFF
1-3	Parity selection	Even parity	Odd parity	OFF

Note 2 Numbers 4 and 5 of DIP-SW1 set the communication speed.

DIP Switch 1 Transmission Speed Switching

SW1-4	SW1-5	Baud Rate (bps)
ON	ON	1200
OFF	ON	2400
ON	OFF	4800
OFF	OFF	9600

Note 3 Number 6 of DIP-SW1 sets the connection type of LineDisplay.

Note 4 Numbers 7 and 8 of DIP-SW2 set the reset signal.

### C.2 Memory switch settings

This device does not have memory switches.

## Appendix D Default Values of Properties

The default values of the properties of this device are shown below.

Property Name	Default value	Acceptable Setting Values
AutoDisable	false	true false
CapCompareFirmwareVersion	false	-
CapPowerReporting	PowerReporting.Standard	-
CapStatisticsReporting	true	-
CapUpdateFirmware	false	-
CapUpdateStatistics	true	-
CheckHealthText	""	-
Claimed	false	-
DataCount	0	-
DataEventEnabled	false	true false
DeviceDescription	EPSON TM-U950 MICR	-
DeviceEnabled	false	true false
DeviceName	TM-U950	-
FreezeEvents	false	true false
PowerNotify	PowerNotification.Disabled	PowerNotification.Disabled PowerNotification.Enabled
PowerState	PowerState.Unknown	-
State	ControlState.Closed	-
CapValidationDevice	true	-
AccountNumber	""	-
Amount	""	-
BankNumber	""	-
EPC	""	-
RawData	""	-
SerialNumber	""	-
TransitNumber	""	-
CheckType	CheckType.Unknown	-
CountryCode	CheckCountryCode.Unknown	-

## Appendix E DeviceStatistics

---

The Statistics function list of this device is shown below.

### TM-U950

XML Definition Name	Description	Reset Permission	Update Permission
UnifiedPOSVersion	UPOS version	×	×
DeviceCategory	Device category	×	×
ManufactureName	Manufacturer name	×	×
ModelName	Device name	×	×
SerialNumber	Serial number	×	×
ManufactureDate	Manufacture date	×	×
MechanicalRevision	Device revision	×	×
FirmwareRevision	Firmware version	×	×
Interface	Interface	×	×
InstallationDate	Installation date	×	×
HoursPoweredCount	Operation time	O	O
CommunicationErrorCount	Communication error count	O	O
GoodReadCount	Number of successful MICR data	O	O
FailedDataParseCount	Number of failed MICR data analysis	O	O
FailedReadCount	Number of failed MICR data	O	O

O:Permitted

× :Not permitted